

Panasonic

Projection Television Operating Instructions

Model No. **TX-43P800H**

TX-43P800X

TX-51P800H

TX-51P800X



T [tau]
GIGA



This is a combined Operating Instruction manual for all the above series of models.

Please read these instructions before operating your set and retain them for future reference.

TQBC0540

Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new Projection television set.

To obtain maximum benefit from your set, please read these Instructions before making any adjustments, and retain them for future reference.

Retain your purchase receipt also, and note down the Model Number and Serial Number of your set in the space provided on the rear cover of these Instructions.

Visit our Panasonic Web Site <http://www.panasonic.co.jp/global/>

Important Information

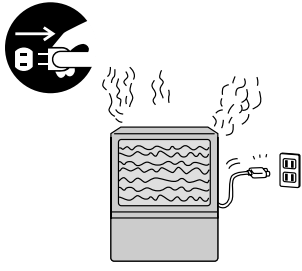
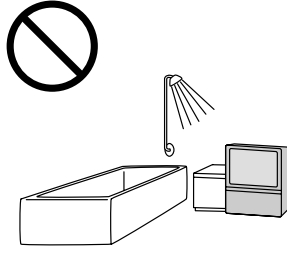
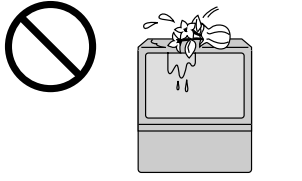
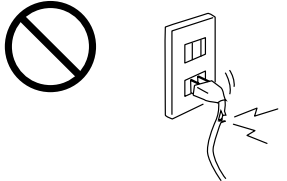
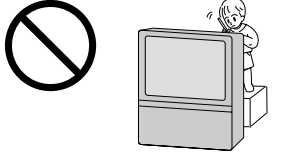
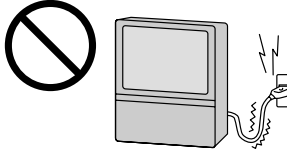

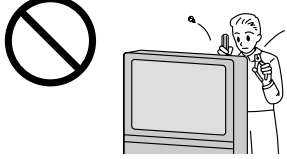
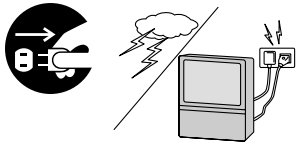
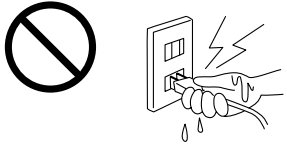
- (1) The long time (max. 2 hours) use of a TV game on this set is not recommended, since the signal from the TV game may cause damage to the picture projection tubes of the set.
- (2) Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Projection TV screen.
Examples of still pictures include logos, video games, computer images and teletext.
If still picture cannot be avoided, reduce the brightness and contrast levels of the picture to minimize any damage that might occur.
- (3) In order to minimize any damage to the projection tubes, this set uses the PICTURE SHIFT function (Refer to page 23) to change (shift) the entire pictures approximately 2 mm every 15 minutes.

Table of contents





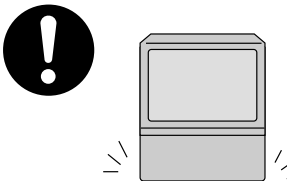
Warnings and Cautions	3	How to Cancel the Skip Function	21
Before Operating This Set	4	Sound System Selection (Different region use differing systems) ..	21
Safety Precaution	4	Colour System Selection (Different region use differing systems) ..	21
Securing the casters	4	Owner ID	22
Quick Reference Guide for your TV Set	5	Setup Adjustment	23
Connecting the Aerial Cable to the RF in Terminal	5	OFF TIMER	23
Connecting Headphones	5	CH COLOUR SET	23
Connecting the Plug to the Wall Outlet	6	CHILD LOCK	23
How to Turn the Power On	6	BLUE BACK	23
Battery Installation	6	ILLUMINATION	23
Battery cautions	6	3D-COMB	23
Location of Controls	7	PICTURE SHIFT	23
Controls and Terminals on the TV	7	LANGUAGE	23
Connections	8	COLOUR SYSTEM	23
How to connect the "AV1, 2, 3 or 4" Input Terminals	8	FLICKER REDUCTION	23
How to connect the DVD Input Terminals	9	VCR/GAME	23
How to connect the AV Monitor Output Terminals to other equipment	9	Picture Adjustment	24
General Operation	10	Sound Adjustment	26
On-Screen menu Display from Remote Control ..	12	Multi Screen	27
Convergence Adjustment	14	Multi PIP	27
Convergence Adjustment mode	14	Channel Search	28
Convergence1 Adjustment for RED, BLUE and GREEN ..	14	TELE TEXT	29
Convergence2 Adjustment for RED and BLUE	15	Advanced Remote Control Operation	32
Tuning Channels	15	Stereo Bilingual Sound Selection	32
Channel Selection	16	VCR / DVD Control	32
Channel Allocation	17	Manufacturer setting	33
Automatic Tune	18	Troubleshooting	34
Manual Tune	19	Cleaning	34
Fine Tuning	20	Specifications	35
How to Cancel the Fine Tuning	20		
Programme Number Skip	20		

Warnings and Cautions

⚠ Warnings





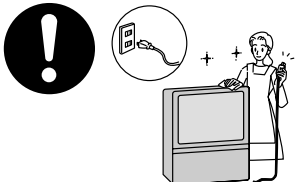
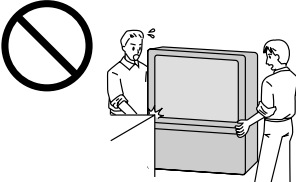
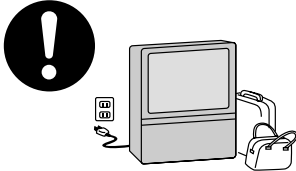
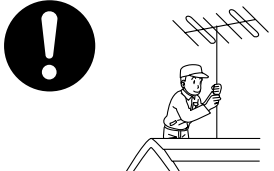
	Unplug the power cord in the event of any malfunction (screen goes blank, no sound, odd sounds, smoke or unusual odors coming from the unit). Unplug the power cord if foreign matter or water falls into the unit, or if the unit is dropped or the cabinet is damaged.		DO NOT use this unit near water. (Near a bathtub, etc.)
	DO NOT place any of the following on the unit: Flower vases, flower pots, cups, small metal objects, or cosmetics containers, chemicals or water.		DO NOT use if the power cord or power plug is damaged, or if the plug does not fit tightly into the socket.
	DO NOT insert foreign objects (metal or easily flammable objects).		DO NOT use at a voltage other than indicated
	TAKE CARE NOT to damage the power cord.		DO NOT remove the rear cover as live parts and High Voltage components are accessible when the rear cover is removed.
	DO NOT touch the aerial cable and this unit when there is lightning.		DO NOT touch the power plug if your hands are wet.

⚠ Cautions

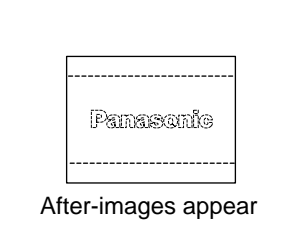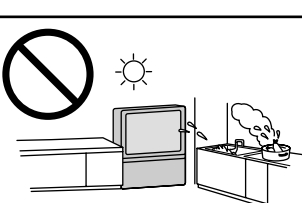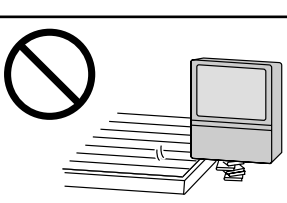 After-images appear	Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Projection TV screen. Examples of still pictures include logos, video games, computer images, teletext and images displayed in 16:9 mode. Note: The permanent after-image on the Projection TV screen resulting from fixed image use is not an operating defect and as such is not covered by the Warranty. This product is not designed to display fixed images for extended periods of time.		
	DO NOT place in humid or dusty location, or areas exposed to smoke or steam. DO NOT place in direct sunlight and other sources of direct heat.		DO NOT place in an unstable location.
	DO NOT stand, or place heavy objects on the unit. Particular care should be taken by families with small children.		Place in a safe location. Fix the TV to a wall. (refer to page 4)

Warnings and Cautions

⚠ Cautions

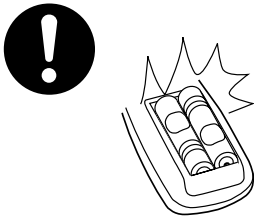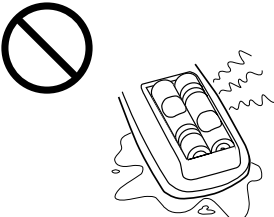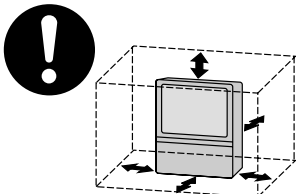
	<p>When inserting batteries, ensure that the polarities (positive and negative) are correctly aligned. Insert as shown on remote control. If inserted incorrectly, battery fluid may leak, and fire, injury, or damage to surrounding components may result.</p>		<p>Do not mix new and old batteries. Use only the specified batteries. Failure to follow this precaution may result in leakage of battery fluid. Fire, injury, or damage to surrounding components may also result.</p>
	<p>Adequate ventilation is essential to prevent failure of electrical components, we recommend that a gap of at least 10 cm (↔) is left all around this unit even when it is placed inside a cabinet or between shelves.</p>		<p>Turn the power "Off" before connecting other electrical equipment.</p>
	<p>Before cleaning, unplug the power plug from the socket.</p>		<p>DO NOT joint the unit.</p>
	<p>Unplug the power plug from the socket if you are not going to use the unit for an extended period.</p>		<p>Ask your sales outlet to install the aerial.</p>

To ensure continued excellent performance by this product, periodic cleaning is recommended. See page 34 for more information.

Before Operating This Set

Safety Precaution

Please take safety precautions to prevent the unit from falling over. The unit may fall over during earthquakes, or if someone stands on or shakes the TV.

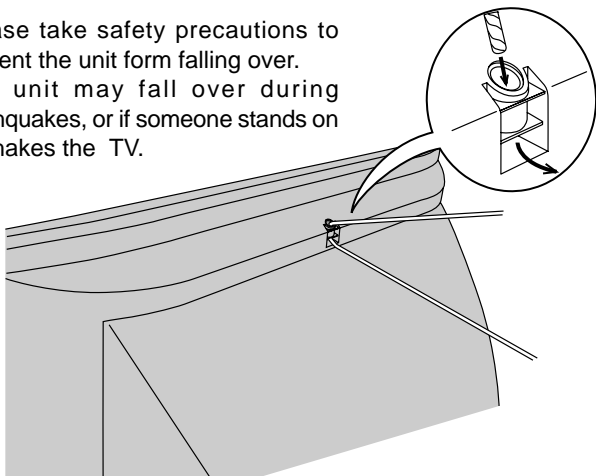


Fixing to a wall

Use a strong rope or a chain to fasten the TV firmly to a strong support such as a wall or a pillar.

Securing the casters

To prevent the set from tipping forward, turn the two casters on the front of the TV so they face forward, as shown in the picture.

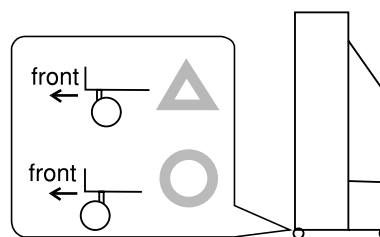

Quick Reference Guide for your TV Set


Please check the model number of your set. This Manual applies to several Models and there are slight differences among them.

Please check the table below to see what your TV is equipped with before you begin using these Operating Instructions. Instructions are given for all functions, please disregard these which do not apply to your TV.

* : Function available

Model Number		TX-43P800H	TX-51P800H	TX-43P800H TX-51P800H	TX-43P800X TX-51P800X
Destination	Southeast Asia	*	*		
	NZ	*			
	Australia			*	
	Middle East				*
Multi Language	English	*	*	*	*
	Chinese	*	*	*	
	Arabic				*
Power Source	AC 110-240 V 50 / 60 Hz				*
	AC 220-240 V 50 / 60 Hz	*	*	*	
CH Select		*	*		*

Connecting the Aerial Cable to the RF in Terminal

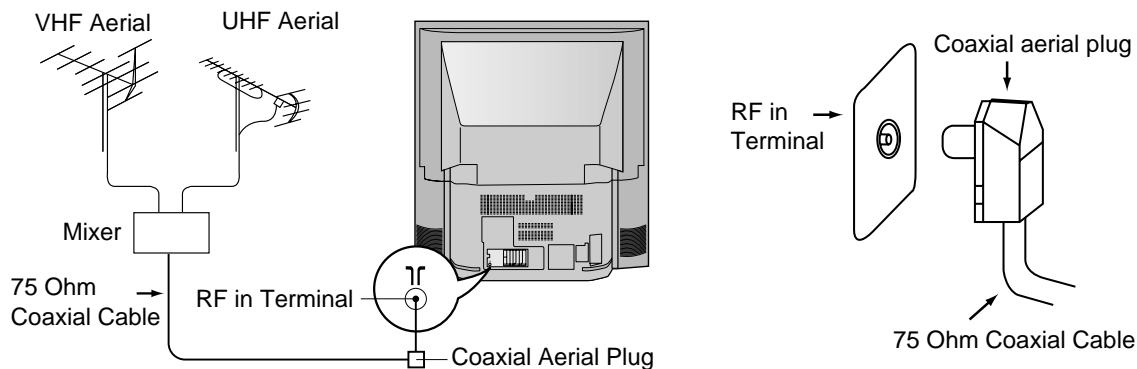


To obtain optimum quality picture and sound, an Aerial, the correct cable (75 Ohm coaxial) and the correct terminating plug are required. If a communal Aerial system is used, you may require the correct connection cable and plug between the wall Aerial socket and your set. Your local Television Service Centre or Dealer may be able to assist you in obtaining the correct Aerial system for your particular area and accessories required.

Any matters regarding Aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the Customer.

Connecting Headphones

Connect headphones as follows.

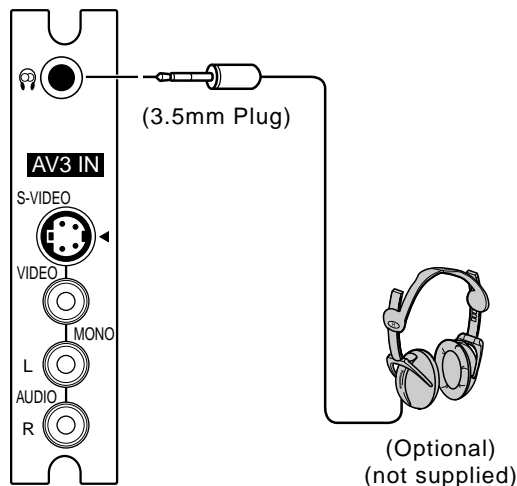

You can listen to sound from the headphones plugs as shown below.


Screen condition		Speaker Sound	Headphones	Monitor Output
Single picture/Teletext	A	A (Stereo)	A (Stereo)	A (Stereo)
Picture in Picture	A B	A (Stereo)	A (Stereo)	A (Stereo)
Picture and Picture	A B	A (Stereo)	A (Stereo)	A (Stereo)

Headphones plug:

When a Headphones plug is inserted into the Headphones socket, all speakers will be automatically disconnected; only the Headphones will function. Use Volume Up "+" or Down "-" button to control volume level.

Before Operating This Set


Connecting the Plug to the Wall Outlet

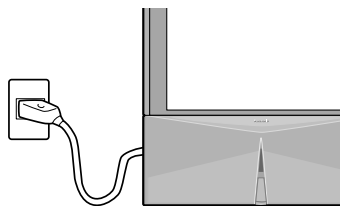

Notes:

- Main plug types vary between countries. The main plug shown at left may therefore not be the type fitted to your set.
- The On/Off switch on this model does not full disconnect the TV from the mains supply.

How to Turn the Power On

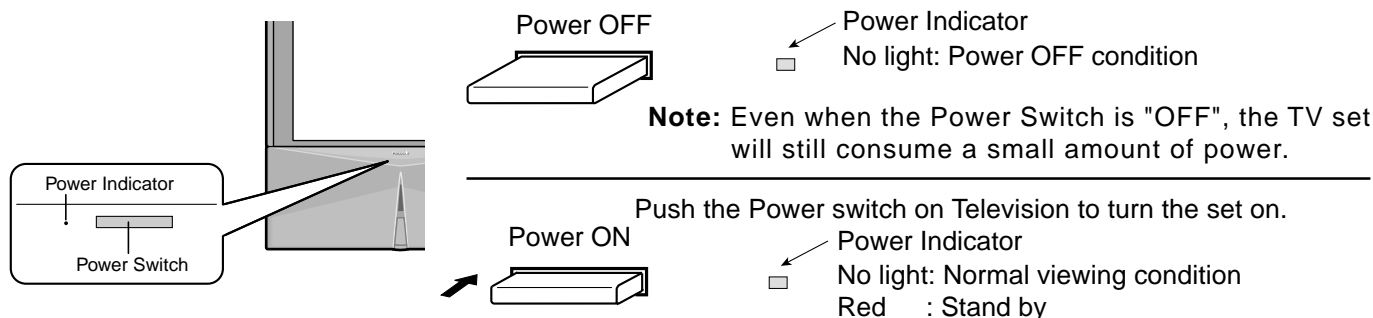


Notes:

- When in the Stand-by condition (Refer to page 11), it is also possible to turn the TV set on by pressing any of the “Direct Programme Number Selection buttons” (0 - 9) or “Programme Number Up or Down buttons” on the TV set or on the Remote Control.
- If the Wall Outlet is switched OFF or the Main Plug is unplugged, when the TV set is again turned ON (by either connecting the Main Plug to the Wall Outlet or switching the Wall Outlet ON), it will have returned to the original state.

Battery Installation

1 Open the cover.


Apply slight downward pressure while pulling towards the bottom.

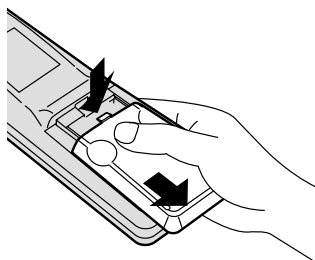


2 Batteries: Use two “R6 (AA)” size batteries.

Insert the batteries ensuring the correct polarities. This is identifiable by the “+” and “-” symbols on the batteries and inside the battery compartment.

Two “R6 (AA)” size

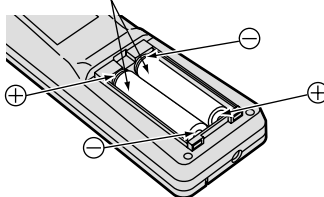

3 Replace the cover.

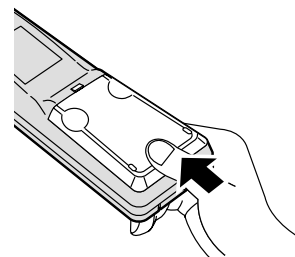


Do not use rechargeable (Ni-Cd) batteries.

They are different in shape and performance and may fail to ensure correct operation.

Battery cautions

The incorrect use of batteries can cause electrolyte leakage which will corrode the Remote Control or cause the batteries to burst.

Old Batteries

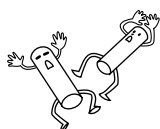


New Batteries



Replace both batteries at the same time.



 
Don't mix different battery types.
(alkaline with carbon zinc, etc.)



Don't Recharge.

Location of Controls

Controls and Terminals on the TV

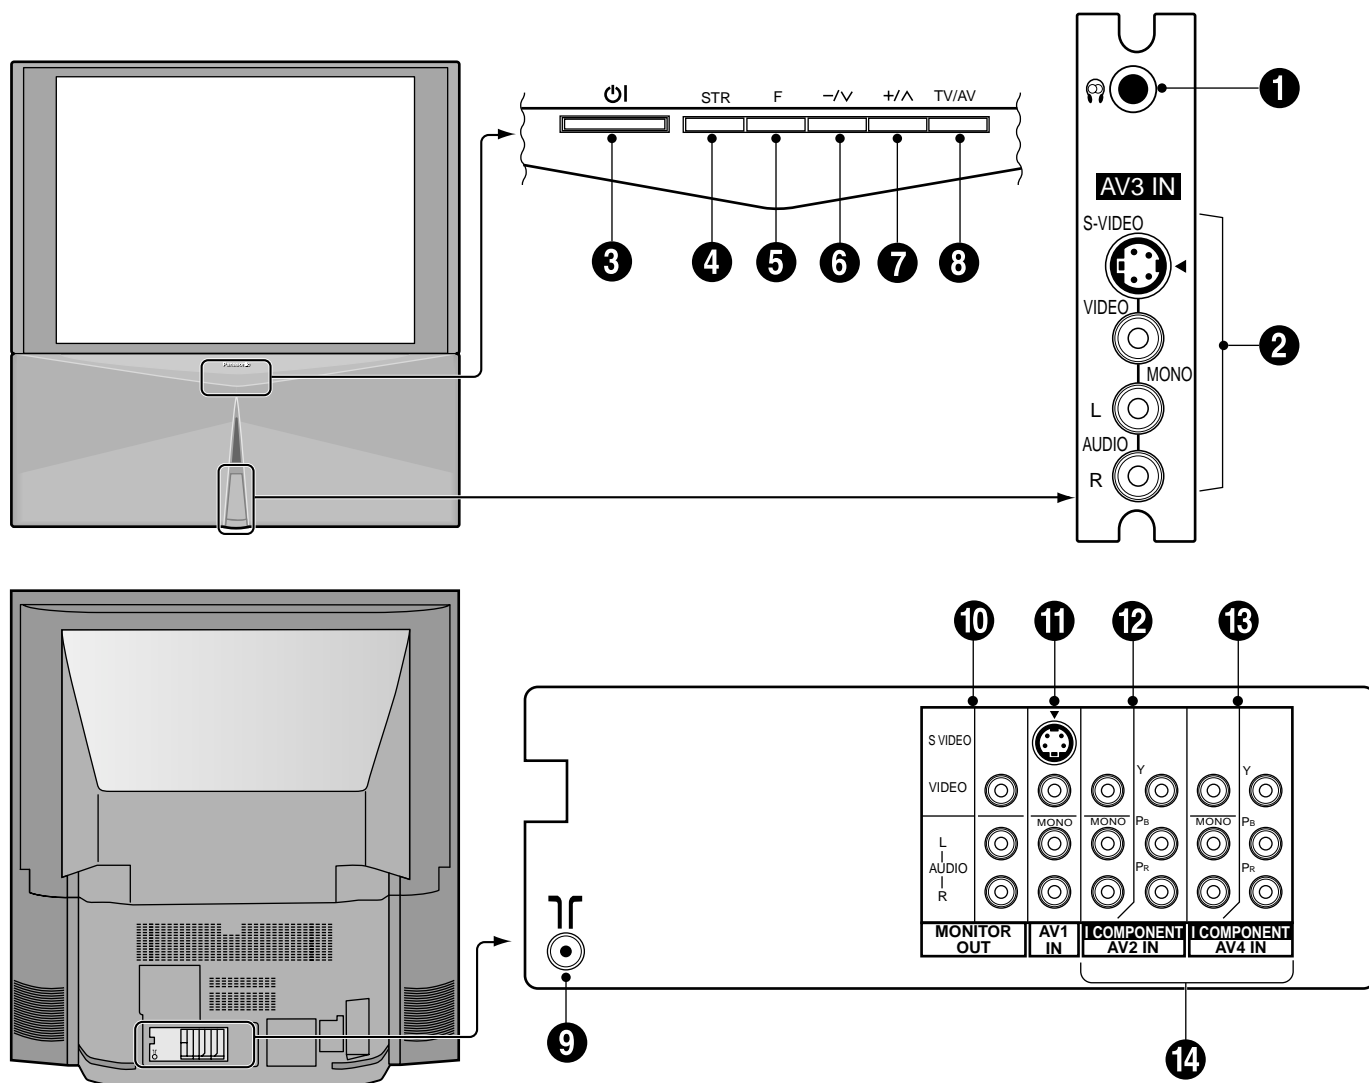


Item No.	Function	Refer to Page	Item No.	Function	Refer to Page
1	Headphones Jack	5	8	TV/AV Selection	10
2	AV3 Input Terminals	5	9	Aerial Terminal (RF In Terminal)	5
3	Power Switch	10	10	Monitor Output Terminals	9
4	STR	10	11	AV1 Input Terminals	8
5	Function Selection	10	12	AV2 Input Terminals	8
6	Volume Down (-) / Programme Number Down (V)	10	13	AV4 Input Terminals	8
7	Volume Up (+) / Programme Number Up (Λ)	10	14	DVD (Y. Pb. Pr) Input	9

Connections

How to connect the “AV1, 2, 3 or 4” Input Terminals


Connect VCRs and other peripheral equipment

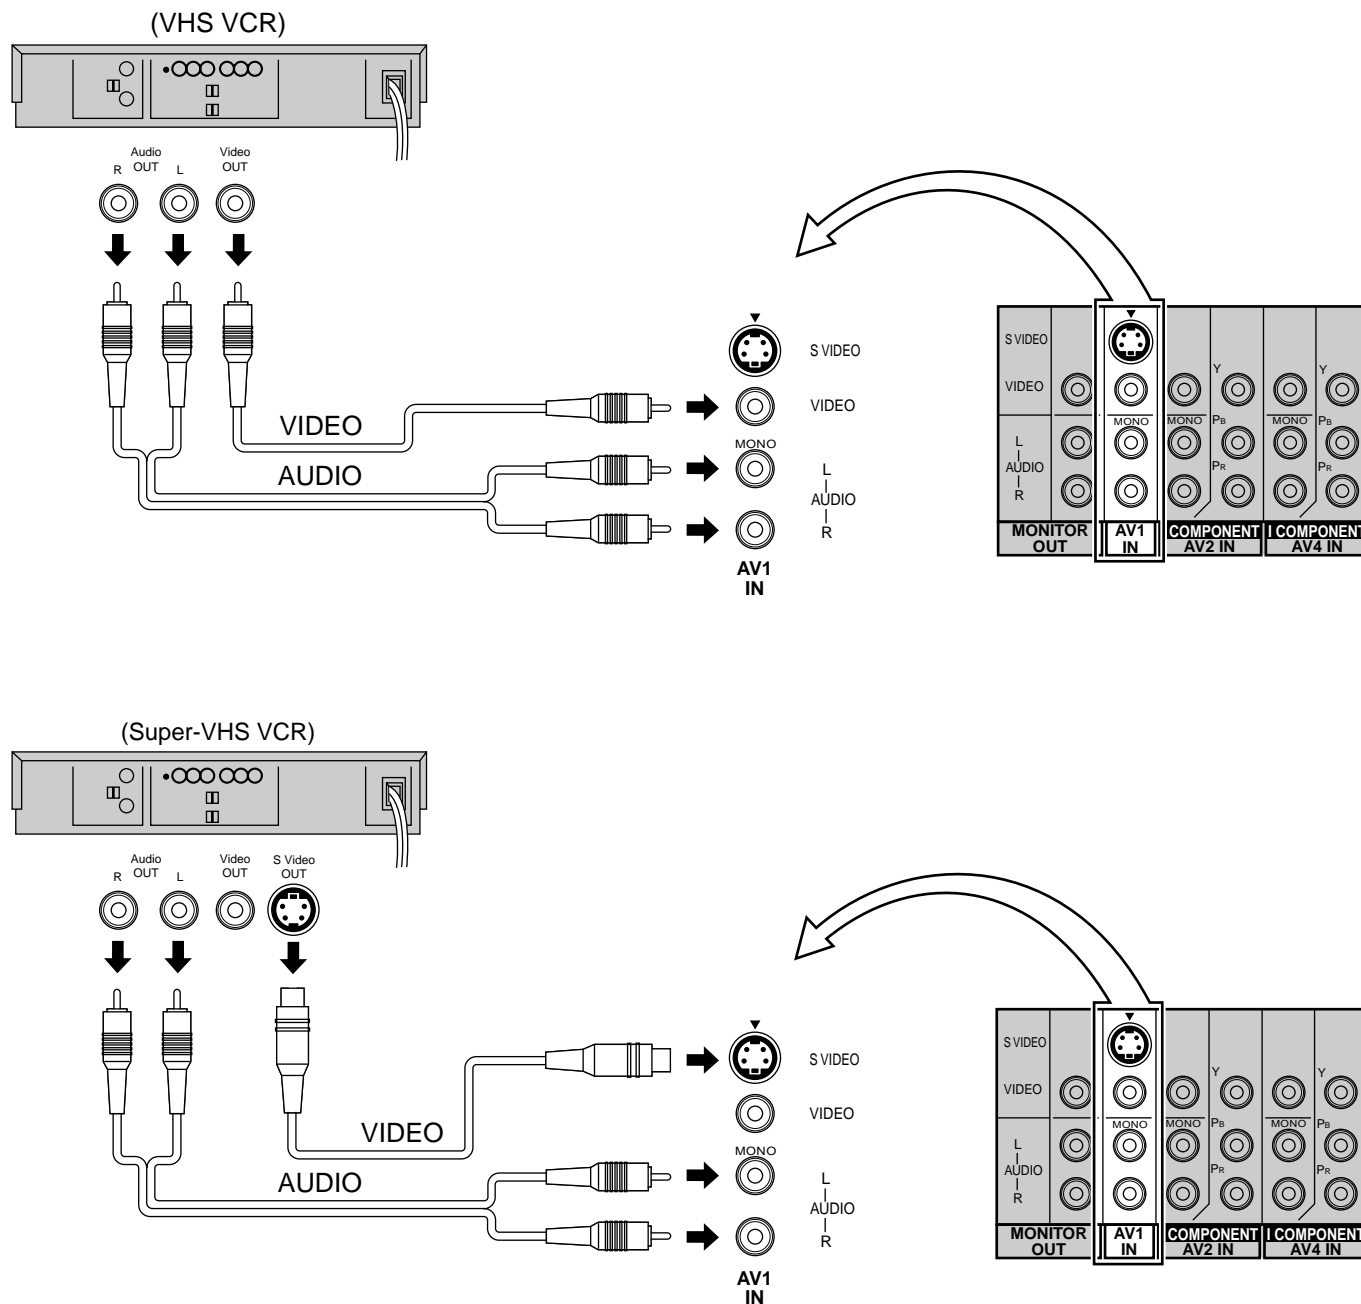

Notes:

- When an S Video cable is connected to the S Video terminal, the corresponding Video input will be switched off and the signal from the S Video input will be used.
- When a Monaural VCR is used, connect the Monaural Audio cable to the Audio “L” (Left) terminal.
- Select the desired AV input position by pressing the TV/AV button. (Refer to page 10)
- Input 3 is located on the front of the unit.
- The AV2 and AV4 audio input terminals serve as the audio input terminal for both the Video input and the DVD input.

How to connect the DVD Input Terminals

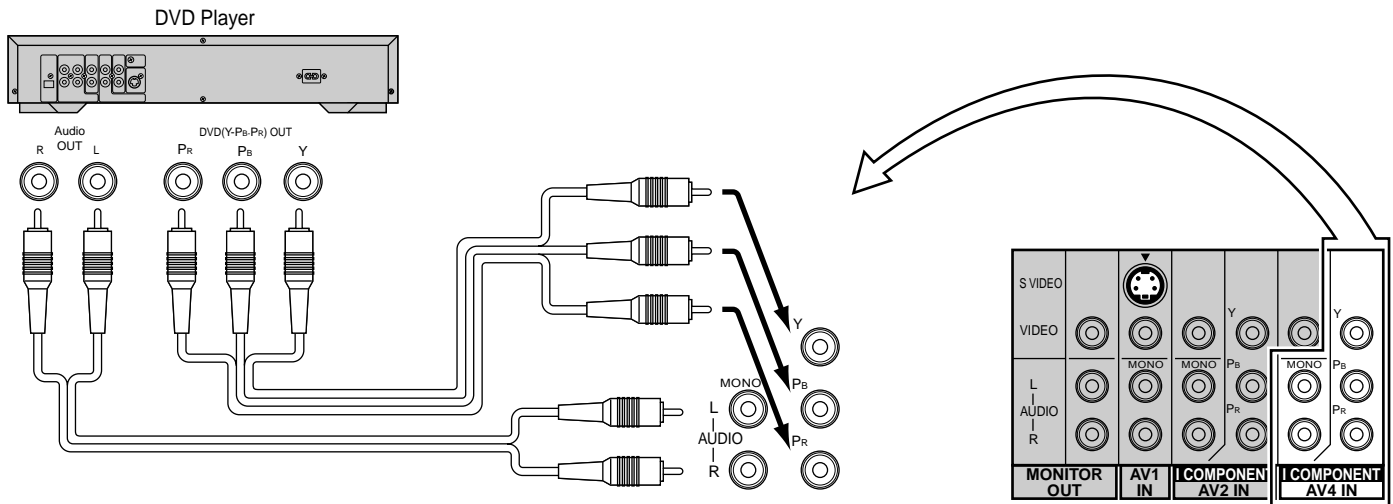


Notes:

- The AV4 audio signal is common for both AV4 and DVD input signal terminals.
- The DVD signal input terminal takes priority over the AV4 video signal input terminal.
- Similar connection are available at the COMPONENT VIDEO input 2 terminal.

How to connect the AV Monitor Output Terminals to other equipment


The "Monitor Out" Terminals output the same signals as main picture on the TV screen and sound from the speaker at that time, e.g. TV programmes or signals from AV1, AV2, AV3 or AV4 input.

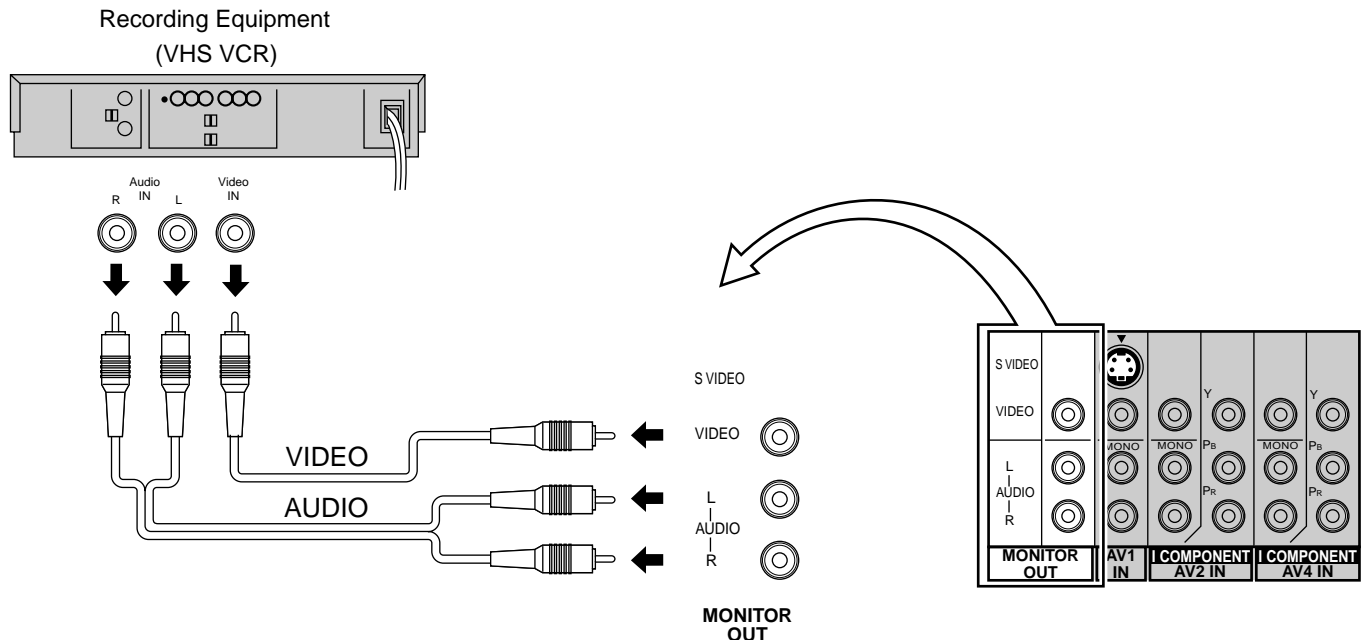

Notes:

- Never connect the same video recorder with both the VIDEO IN and MONITOR OUT terminals on this TV set, as this could cause incorrect operation.
- The monitor output emits the main picture normal video and audio signals.
- Teletext display on screen will not be output at the MONITOR OUT terminals.
- Even if the television is in picture-in-picture condition, MONITOR OUT terminals output the same signals as main picture on the screen and sound from speakers. Sub picture including strobe, still, channel search, etc. will not be output at the MONITOR OUT terminals.
- The DVD signal (Y, Pb, Pr) is not output at the MONITOR out terminals.

General Operation

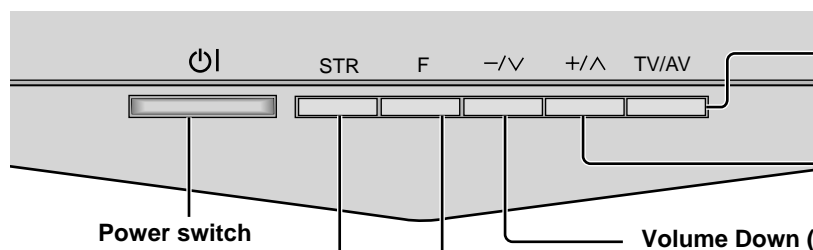

Power switch


STR

Used to store tuning and other function settings. Also used to start the menu demonstration.

Function selection

Displays the on screen display functions, use repeatedly to select from the available functions.

The following adjustments can be accessed directly.

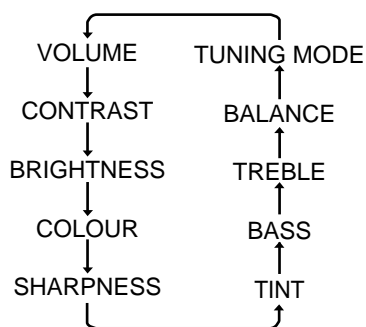

Notes:

- **TINT:**
Displayed when receiving NTSC and YUV625i signals.
- **TUNING MODE :**
Not displayed during AV mode.

TV/AV Selection

Press to select TV, AV1, AV2, AV3 and AV4 input signal modes sequentially.

Volume Up (+) / Programme Number Up (Λ)

Volume Down (-) / Programme Number Down (γ)

Picture Menu (see page 12, 24)

Sound Menu (see page 12, 26)

Set up Menu (see page 13, 23)

Stereo/Bilingual Sound Selection
(see page 32)

TEXT Favorite Page Selection
(see page 30)

TV/TEXT Selection (see page 29, 30)

100Hz/PROGRE (see page 25)

Surround (see page 26, 27)

Picture in Picture Selection
(see page 27)

Recall

Press to display the current system status, for example, Programme number, Channel number, Stereo mode, Picture menu, Sound menu, Scan mode, Sound system and colour system.

VCR/DVD Rewind/Review

Normalization (see page 25, 27)

Store (see page 18, 19, 20, 21, 22, 30)
Stores some settings in TUNING menus and TELE TEXT.

Power (Stand-by) (see page 6)

The TV set must first be plugged into the wall outlet and turned on at the power switch. Press this button to turn the TV set On from Standby mode, press it again to turn the TV set OFF to Standby mode.

Sound Mute

Press to mute the sound completely the "Mute" symbol will appear. Press again to restore the previous sound level, and cancel the mute.

Programme Number Selection

Press to select the next higher or lower Programme number.

Volume Adjustment

Press to increase or decrease the sound volume level.

VOLUME 18

TV/AV Mode Selection

Press to select TV, AV1, AV2, AV3 and AV4 input signal modes sequentially.

Remote control : TV/AV

AV1 AV2 AV3 AV4

Press to display AV1 - AV4 at the bottom of the screen. Each coloured button corresponds to each input signals. For example, pressing the Red button selects AV1.

Coloured buttons used for Multi Screen functions (see page 27, 28)

Teletext functions (see page 29)
AV selection (see page 11)

TEXT Index (see page 31)
/Channel Search (see page 28)

TEXT hold (see page 30)
/Still (see page 28)

Direct programme Number

• Direct Programme Number Selection (CH SELECT = DIRECT)

You can select the number directly by pressing the corresponding programme number buttons.

Programme Number 8..... 8
Programme Number 36..... 3, 6
Programme Number 124... 1, 2, 4


• Direct Programme Number Selection (CH SELECT = POSITION) (Other than Australia)

You can select the numbers directly by pressing "Number 0-9" buttons or by pressing "Two Digit" and "Number 0-9" buttons.

Programme Number 8 8
Programme Number 12... 1, 2


Note:

- When the Skip setting for Programme Number 100 through 125 is on, the channel selection time will be shortened, and thus you can not input three digits at a time.

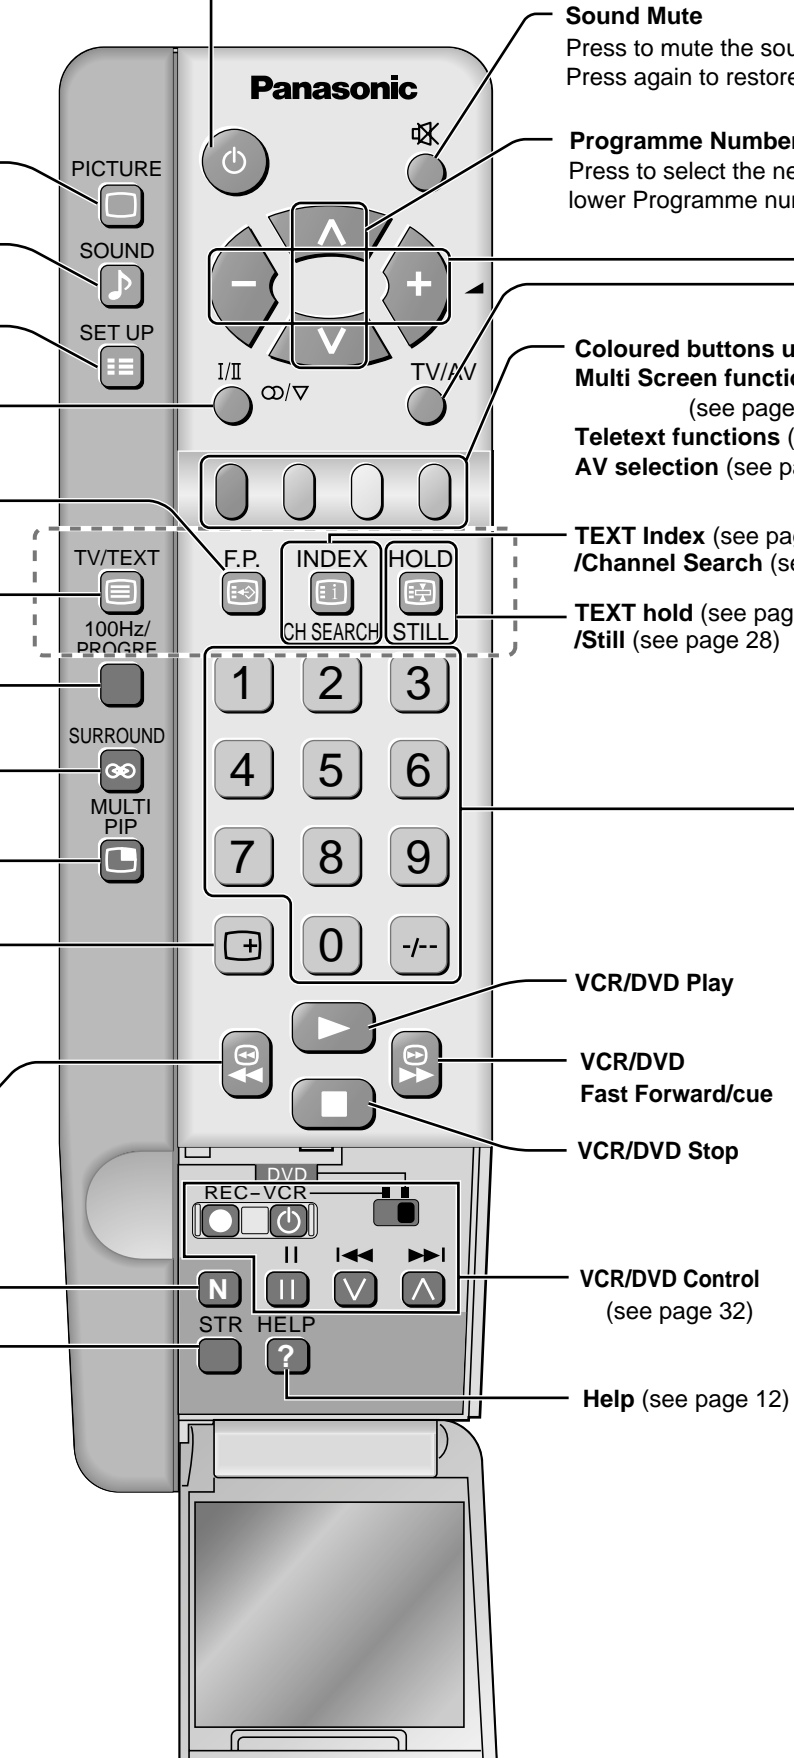


On-Screen menu Display from Remote Control


To PICTURE adjust menu
(see page 24)

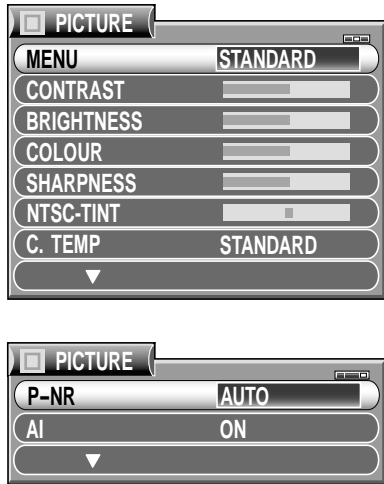

To SOUND adjust menu
(see page 26)

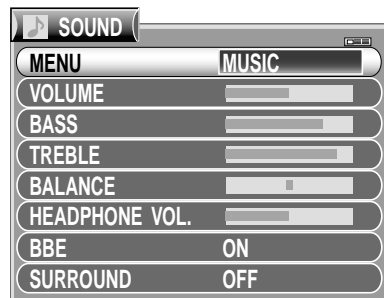

To HELP MENU

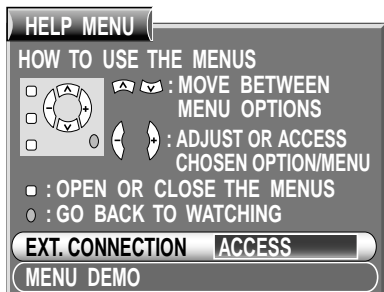


The **HELP** button runs a demonstration of on screen display menus available.

Press the **HELP** button and select one of the options.





On-Screen menu Display from Remote Control


To SETUP MENU
(see page 23)

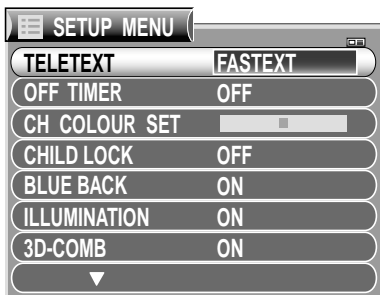


Press to access

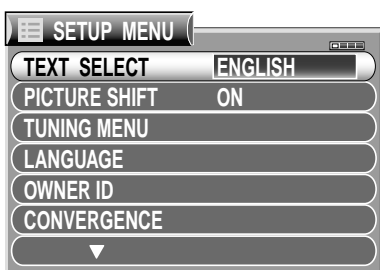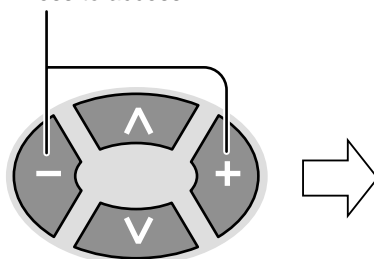



To TUNING MENU (see page 15)

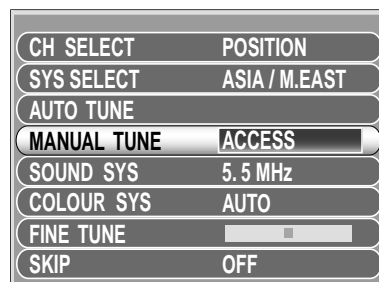


For Australia only

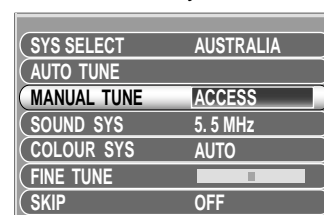

To Owner ID (see page 22)

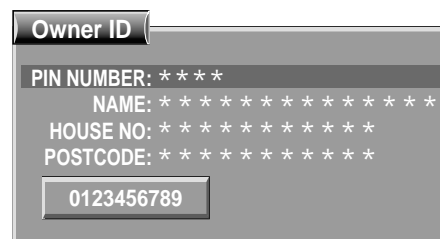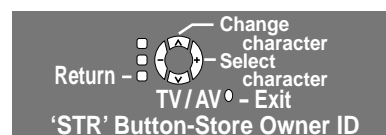

To CONVERGENCE
(see page 14)

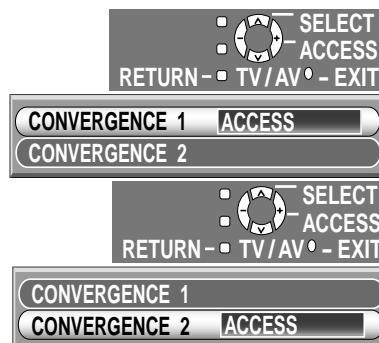


Note:

Models intended for markets other than Australia have the CH SELSCT function (see page 15).
Examples in this manual show a model that has the CH SELECT function.

Convergence Adjustment

Convergence Adjustment mode

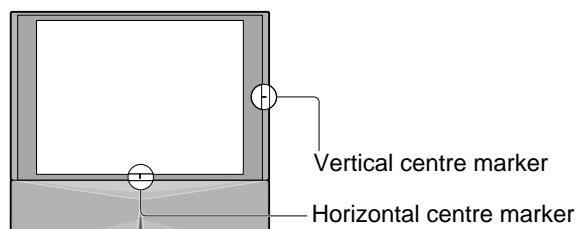



Prior to adjustment, tune the broadcast signal to the video input signal and operate the set for more than 60 minutes. If the location or direction of the set is changed or moved, the display may be out of alignment. If necessary, carry out the following procedures once with PAL signal and again with the NTSC signal.

1 Press to display the Setup Menu.

2 Press to select the "CONVERGENCE".
Press to access to the "CONVERGENCE" menu.

3 Press to select the "CONVERGENCE1" or the "CONVERGENCE2".
Press to access to the function.

Example:
CONVERGENCE1
is selected.

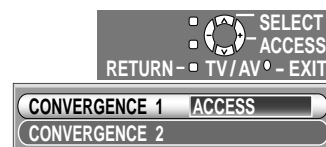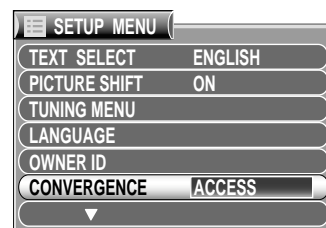


Convergence1 Adjustment for RED, BLUE and GREEN

RED

Press to align the horizontal red line with the horizontal blue line.
(Becomes a white line)

Press to align the vertical red line with the vertical blue line.
(Becomes a white line)

Press **N** button to adjust the blue mode.
(Stores RED)

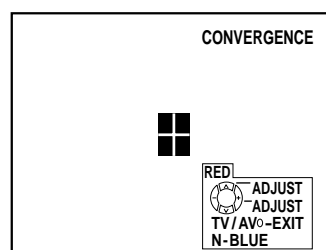


BLUE

Press to align the horizontal blue line with the horizontal yellow line.
(Becomes a white line)

Press to align the vertical blue line with the vertical yellow line.
(Becomes a white line)

Press **N** button to adjust the green mode.
(Stores BLUE)

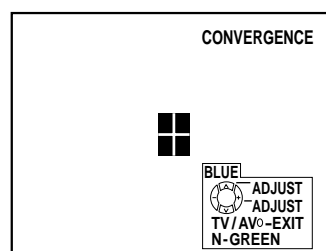

Only when you cannot adjust with RED and BLUE proceed to the following GREEN adjustment.

GREEN


Repeat above adjustment for each position.

Press to align the horizontal green line with the vertical centre maker.

Press to align the vertical green line with the horizontal centre maker.


Press **N** button to adjust the red mode. (Stores GREEN)

Press at any time to return to the normal viewing.

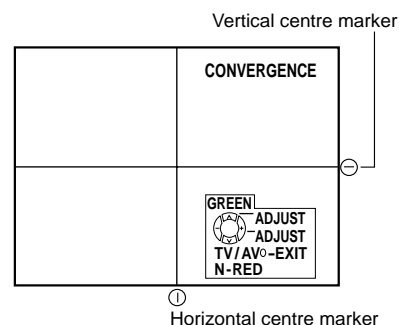



Convergence2 Adjustment for RED and BLUE

This function adjust the convergence of the side part of the screen.

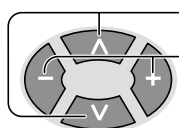

Press to select the CONVERGENCE2.


Press to access to the function.

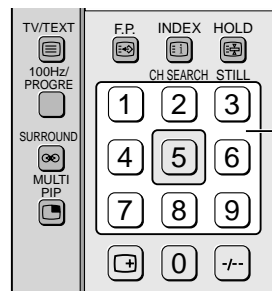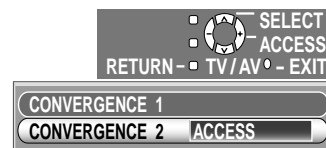


Remote control

Press the Number button on the Remote Control to select the position which you would like to adjust.

(Example) Position 1 is selected.

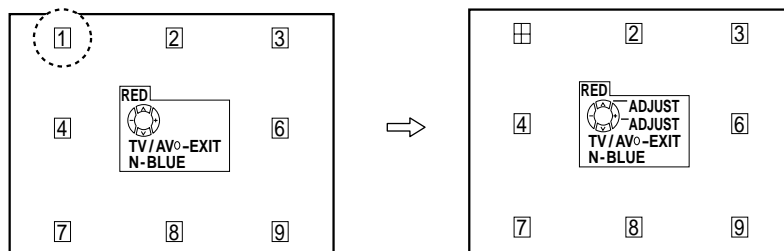


RED

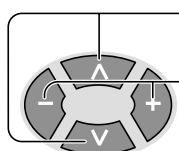


Press to align the horizontal red line with the horizontal blue line. (Becomes a white line)

Press to align the vertical red line with the vertical blue line. (Becomes a white line)

Press **N** button to adjust the blue mode. (Stores RED)

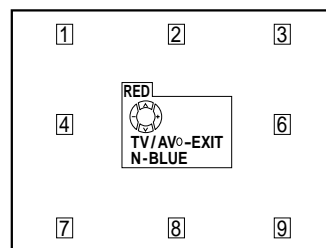


BLUE

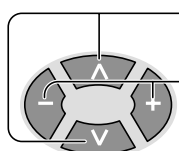

Press to align the horizontal blue line with the horizontal yellow line. (Becomes a white line)

Press to align the vertical blue line with the vertical yellow line. (Becomes a white line)

Press to return to the normal viewing. (Stores BLUE)

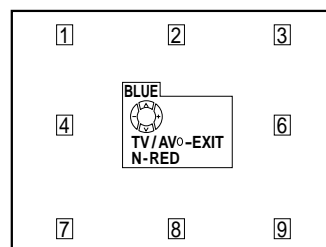

Note:

If you wish to view a video with a different colour system (PAL / SECAM, NTSC), repeat the steps above while displaying a picture.

Tuning Channels

1 Display the TUNING MENU

 
1

SET UP




Press to display the SETUP MENU.

2



Press to select the TUNING MENU.

Press to access TUNING MENU.

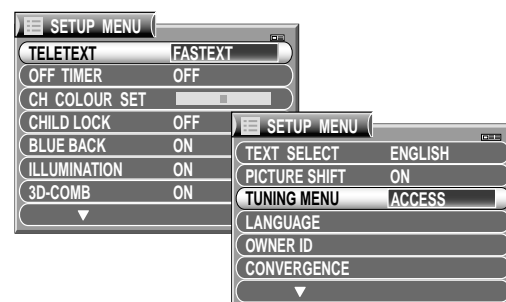


Continued on next page ►

Tuning Channels

2

1 Select the "POSITION" or the "DIRECT" (Other than Australia)

CH SELECT

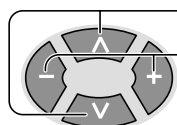


Press to select the "CH SELECT (Channel Select)" Mode.

Press to select the "POSITION" or the "DIRECT".


Setting range when the "POS." (Position) has been selected:
Position 0-99

Setting range when the "DIRECT" has been selected: Channel 0-125

The channel select indicator will change as follows. DIRECT \longleftrightarrow POSITIOIN

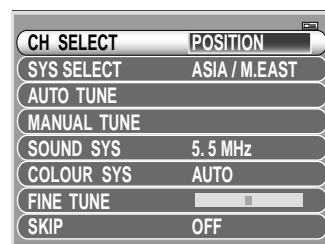

2 Regional System Selection

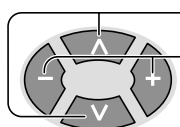

Press to select the "SYS SELECT".

Press to select the appropriate system.

The system select indicator will change as follows.

CHINA \longleftrightarrow HK/UK \longleftrightarrow ASIA/M.EAST \longleftrightarrow NZ/INDONES \longleftrightarrow AUSTRALIA
JAPAN \longleftrightarrow CATV \longleftrightarrow AMERICA \longleftrightarrow SPECL VER \longleftrightarrow E.EUROPE



System Select by Regional

SYSTEM SELECT	Region	SYSTEM SELECT	Region
CHINA	China	E.EUROPE	CIS, Poland, etc.
HK / UK	Hong Kong, United Kingdom	SPECL VER	South Africa
ASIA/M.EAST	Malaysia, Singapore, Thailand, Asia countries, Kuwait, Saudi Arabia, United Arab Emirates, Middle East countries, etc.	AMERICA	U.S.A., Chile, Mexico, Panama, Peru, Philippines, Taiwan, Venezuela, etc.
NZ / INDONES	New Zealand, Indonesia, etc.	CATV	USA CATV
AUSTRALIA	Australia	JAPAN	Japan

Channel Selection

Select the most easily viewed channel selection method.

POSITION SELECT (Other than Australia)

When the Channel Selection is on POS. (Position), and Auto Tune is performed, the unit memories the channels tuned in order from programme No.1.

Press the button **1** to view channel 2.

Press the button **2** to view channel 4.

Press the button **3** to view channel 6.

During position mode various reception channels can be viewed.

Example

Programme Number	Channel Display	Received Channel
1	2	2
2	4	4
3	6	6
4	8	8
5	10	10
6	12	12
7	14	14
8	16	16
9	18	18
10	20	20

DIRECT SELECT

When the Channel Selection is on DIRECT, and Auto Tune is performed, the unit memories the programme number which is the same as the channel tuned.

This method allows you to select the desired channel by pushing the channel display number directly on the remote control to select the station. The channel display numbers for the broadcast stations in each region are listed on page 17.

Example

Programme Number	Channel Display	Received Channel
1	—	—
2	2	2
3	—	—
4	4	4
5	—	—
6	6	6
7	—	—
8	8	8
9	—	—
10	10	10
⋮	⋮	⋮
20	20	20
⋮	⋮	⋮

Channel Allocation


- CATV (USA CATV) channel numbers as recommended by the joint EIA/NCTA Engineering committee and published as EIA INTERIM STANDARD No.6-CABLE TELEVISION CHANNEL IDENTIFICATION PLAN-MAY 1983.
- The receiving channels are as follows;

SYS SELECT	CHINA	HK/UK	ASIA/M.EAST	NZ/INDONES	AUSTRALIA	E.EUROPE	SPECL VER	AMERICA	CATV	JAPAN
CH DISPLAY	RECEIVE CHANNEL									
0	—	—	—	—	—	—	—	—	—	—
1	1	—	—	1	0	1	1	—	1	1
2	2	—	2	2	1	2	2	2	2	2
3	—	—	—	—	2	—	—	—	—	—
4	—	—	—	—	3	—	—	—	—	—
5	—	—	—	—	4	—	—	—	—	—
6	—	—	—	—	5	—	—	—	—	—
7	—	—	—	—	S2	—	—	—	—	—
8	—	—	—	—	—	—	—	—	—	—
9	—	—	—	—	—	—	—	—	—	—
10	—	—	—	—	—	—	—	—	—	—
11	—	—	11	11	—	11	11	—	—	—
12	12	—	12	—	—	12	12	—	—	12
13	13	—	—	—	—	—	13	13	—	13
14	—	—	—	—	—	—	—	14	—	—
15	—	—	—	—	S10	—	—	—	—	—
16	—	—	—	—	6	—	—	—	—	—
17	—	—	—	—	—	—	—	—	—	—
18	—	—	—	—	—	—	—	—	—	—
19	—	—	—	—	9	—	—	—	—	—
20	—	—	—	—	9A	—	—	—	—	—
21	—	21	21	21	10	21	21	—	—	—
22	—	—	—	—	11	—	—	—	—	—
23	—	—	—	—	12	—	—	—	—	—
24	—	—	—	—	S11	—	—	—	—	—
25	—	—	—	—	—	—	—	—	—	—
26	—	—	—	—	—	—	—	—	—	—
27	—	—	—	—	—	—	—	—	—	—
28	—	—	—	—	—	—	—	—	—	—
29	—	—	—	—	—	—	—	—	—	—
30	—	—	—	—	—	—	—	—	—	—
31	—	—	—	—	—	—	—	—	—	—
32	—	—	—	—	—	—	—	—	—	—
33	—	—	—	—	—	—	—	—	—	—
34	—	—	—	—	—	—	—	—	—	—
35	—	—	—	—	—	—	—	—	—	—
36	—	—	—	—	—	—	—	—	—	—
37	—	—	—	—	—	—	—	—	—	—
38	—	—	—	—	—	—	—	—	—	—
39	—	—	—	—	—	—	—	—	—	—
40	—	—	—	—	—	—	—	—	—	—
41	—	—	—	—	—	—	—	—	—	—
42	—	—	—	—	—	—	—	—	—	—
43	—	—	—	—	—	—	—	—	—	—
44	—	—	—	—	—	—	—	—	—	—
45	—	—	—	—	—	—	—	—	—	—
46	—	—	—	—	—	—	—	—	—	—
47	—	—	—	—	—	—	—	—	—	—
48	—	—	—	—	—	—	—	—	—	—
49	—	—	—	—	—	—	—	—	—	—
50	—	—	—	—	—	—	—	—	—	—
51	—	—	—	—	—	—	—	—	—	—
52	—	—	—	—	—	—	—	—	—	—
53	—	—	—	—	—	—	—	—	—	—
54	—	—	—	—	—	—	—	—	—	—
55	—	—	—	—	—	—	—	—	—	—
56	—	—	—	—	—	—	—	—	—	—
57	57	—	—	—	S44	—	—	—	—	—
58	—	—	—	—	20	—	—	—	—	—
59	—	—	—	—	21	—	—	—	—	—
60	—	—	—	—	—	—	—	—	—	—
61	—	—	—	—	—	—	—	—	—	—
62	—	62	62	62	—	62	62	62	62	62
63	—	63	63	63	—	63	63	63	63	C13
64	—	—	—	—	—	—	—	—	—	—
65	—	—	—	—	—	—	—	—	—	—
66	—	—	—	—	—	—	—	—	—	—
67	—	—	—	—	—	—	—	—	—	—
68	—	—	—	—	—	—	—	—	—	—
69	—	69	69	69	—	69	69	69	—	—
70	—	—	—	—	—	—	—	—	—	—
71	—	—	—	—	—	—	—	—	—	—
72	—	—	—	—	—	—	—	—	—	—
73	—	—	—	—	—	—	—	—	—	—
74	—	—	—	—	—	—	—	—	—	—
75	—	S'1	S'1	S'1	—	S'1	S'1	—	—	—
76	—	S'2	S'2	S'2	—	—	S'2	—	—	—
77	—	S'3	S'3	S'3	—	—	S'3	—	—	—
78	—	—	—	—	—	—	—	—	—	—
79	—	—	—	—	—	—	—	—	—	—
80	—	S1	S1	S1	—	S1	S1	—	—	—
81	Z1	S2	S2	S2	—	S2	S2	—	—	—
82	—	—	—	—	—	—	—	—	—	—
83	—	—	—	—	—	—	—	—	—	—
84	—	—	—	—	—	—	—	—	—	—
85	—	—	—	—	—	—	—	—	—	—
86	—	—	—	—	—	—	—	—	—	—
87	—	—	—	—	—	—	—	—	—	—
88	—	—	—	—	—	—	—	—	—	—
89	Z9	S10	S10	S10	—	S10	S10	—	—	—
90	Z10	S11	S11	S11	—	S11	S11	—	—	—
91	Z11	S12	S12	S12	—	S12	—	—	—	—
92	Z12	S13	S13	S13	—	S13	—	—	—	—
93	Z13	S14	S14	S14	—	S14	S14	—	—	—
94	Z14	S15	S15	S15	—	S15	S15	—	—	—
95	Z15	S16	S16	S16	—	S16	S16	—	—	—
96	Z16	S17	S17	S17	—	S17	S17	—	—	—
97	Z17	S18	S18	S18	—	S18	S18	—	—	—
98	Z18	S19	S19	S19	—	S19	S19	—	—	—
99	Z19	S20	S20	S20	—	S20	S20	—	99	C49
100	Z20	S21	S21	S21	—	S21	S21	—	100	—
101	—	—	—	—	—	—	—	—	—	—
102	—	—	—	—	—	—	—	—	—	—
103	—	—	—	—	—	—	—	—	—	—
104	—	—	—	—	—	—	—	—	—	—
105	—	—	—	—	—	—	—	—	—	—
106	—	—	—	—	—	—	—	—	—	—
107	—	—	—	—	69	—	—	—	—	—
108	—	—	—	—	—	—	—	—	—	—
109	—	—	—	—	—	—	—	—	—	—
110	—	—	—	—	—	—	—	—	—	—
111	Z37	—	—	—	—	—	—	—	—	—
112	—	—	—	—	—	—	—	—	—	—
113	—	—	—	—	—	—	—	—	—	—
114	—	—	—	—	—	—	—	—	—	—
115	—	—	—	—	—	—	—	—	—	—
116	—	—	—	—	—	—	—	—	—	—
117	—	—	—	—	—	—	—	—	—	—
118	—	—	—	—	—	—	—	—	—	—
119	—	—	—	—	—	—	—	—	—	—
120	—	S41	S41	S41	—	S41	S41	—	—	—
121	—	—	—	—	—	—	—	—	—	—
122	—	—	—	—	—	—	—	—	—	—
123	—	—	—	—	—	—	—	—	—	—
124	—	—	—	—	—	—	—	—	—	—
125	—	—	—	—	—	—	—	—	125	—

Automatic Tune

This TV uses automatic tuning to determine whether or not the TV can receive a broadcast signal which is being sent, and automatically prepares so that the channel selection can respond to both the position select and direct select modes. Before Automatic Tune, Channel Select and Regional System must already be set (Refer to pages 16).


1 AUTO TUNE

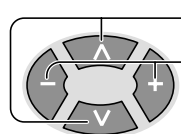

Press to select the "AUTO TUNE".

Press to access to the "AUTO TUNE".

↓ Search Start.

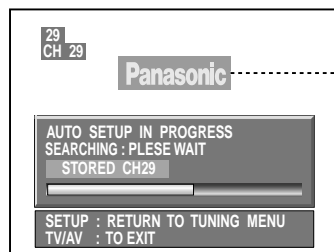


→ When a station is found.

The best tuning position is automatically memorized.

CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	ACCESS
MANUAL TUNE	
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF

2 SOUND SYS

After all stations are tuned, the on-screen display will automatically change from "AUTO TUNE" to "SOUND SYS" Position.

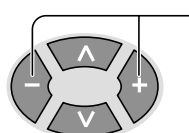

Press to improve the Sound quality, if the Sound is not clear or no sound is produced on a programme Number Position.

4.5MHz ↔ 5.5MHz
6.5MHz ↔ 6.0MHz

STR



Press to store the Sound System.

TV/AV



Press to exit from the Tuning Menu.


This returns the set to the normal viewing condition.

CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF

Note:

When the sound volume is too small to confirm, turn it up by using the sound volume button on the remote control.

3

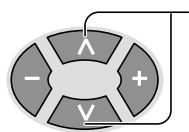


Under the normal viewing condition press to enter each programme Number. Confirm the tuning condition.

If necessary, repeat step 2 for each Programme Number.





Manual Tune

Before Manual Tune, Channel Select and Regional System must already be set (Refer to page 16).


1 MANUAL TUNE

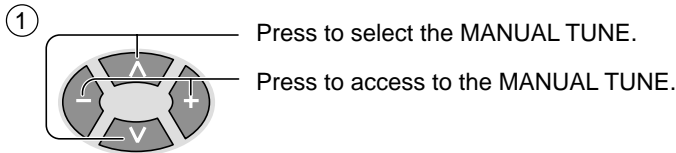

CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	ACCESS
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF

  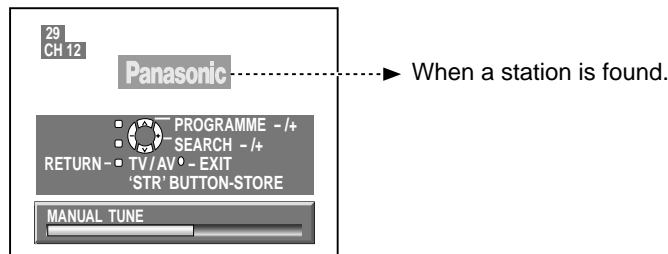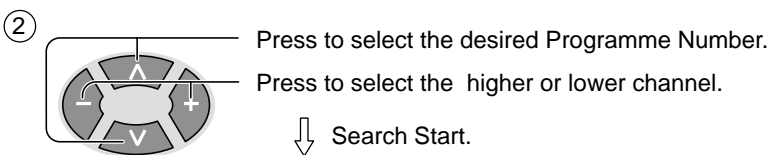

2 SOUND SYS

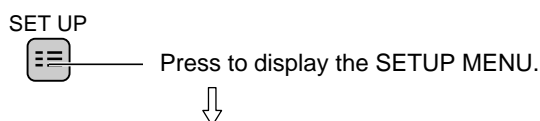

Proceed to the TUNING MENU, and then to the SOUND SYS (refer to page 13).

3 Adjust the Sound System (refer to page 18 step 2 to 3).

Helpful Hint

(1) If a clear picture with correct colours cannot be obtained when a Broadcast or AV signal is received, refer to the “**Colour System Selection**” operation on page 21.

(2)


After the Manual tune or the Automatic tune is finished, under the normal viewing condition press this button to confirm the tuning condition for each Programme Number. If some Programme Numbers are unused (no TV stations), it is possible to skip such Programme Numbers. Please refer to the Programme Number Skip operation on page 20.

(3) When using a VCR without video and audio input/output terminals, it is convenient to connect the aerial cable as indicated in the instruction manual of VCR and to set the designated channel to programme No. “0”. In that case, perform manual tune after setting the colour system and sound system in advance. Further, in multi-system VCR, it is more convenient to set the designated channel to several programme Numbers.


Fine Tuning


Under normal reception conditions this function is not required or necessary.

However, in areas of poor reception or constant interference, a slight adjustment of the tuning may improve the picture and sound quality.

- 1  Press to select the FINE TUNE.
Press until the clear picture is received.


CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF


- 2  Press to store the FINE TUNE.
This stores the FINE TUNE to the selected Programme Number.


- 3  Press to exit from the FINE TUNE.
This returns the set to the normal viewing condition.

How to Cancel the Fine Tuning

 
Canceling previously adjusted (manually) fine tuning, means re-activating the AFT (Automatic Fine Tuning). Re-activating the Automatic Fine Tuning means allowing the set to automatically tune to the optimum tuning position, for that programme Number.


- 1  Select the Programme Number which you would like to return to Automatic Fine Tuning (cancel the manual fine tuning).

- 2  Press to display the SETUP MENU.
↓
Proceed to the TUNING MENU (refer to page 15).

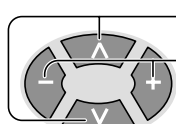- 3  Press to select the MANUAL TUNE.
Press to access to MANUAL TUNE.
Press briefly to tune the best position.


CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	ACCESS
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF


- 4  Press to store the AFT.
This stores the re-activated AFT.

 
- 5  Press to exit from the MANUAL TUNE.
This returns the set to the normal viewing condition.

Programme Number Skip

It is possible to skip Programme Number on which no TV stations are tuned appearing on the screen. The function is only effective when selecting Programme Numbers by pressing the Programme Number Up or Down button either on the TV set or on the Remote control.


- 1  Under the normal viewing condition press to select the Programme Number you would like to skip.


- 2  Press to display the SETUP MENU.
↓
Proceed to the TUNING MENU (refer to page 15).

- 3  Press to select the SKIP.
Press to change the mode to "ON".


CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	ON

- 4  Press to store the Skip function.


- 5  Press to exit from the SKIP.
This returns the set to the normal viewing condition.

- 5  Repeat Step1 to 4 for each Programme Number for which the Skip function is desired.

How to Cancel the Skip Function

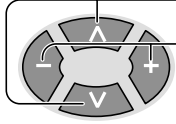- 

Press to select the SKIP.


Press to change the mode to "OFF".
- 

Press to store the Skip function.

CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF

Sound System Selection (Different region use differing systems)

This function is used only in the TV mode when the sound is not clear or no sound is produced on a Programme Number, and is not applicable in AV mode .

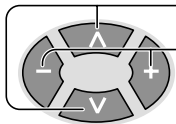- 

Press to select the "SOUND SYS".

Press until the optimum sound is obtained.

The sound system will change as shown.

→ 4.5MHz ↔ 5.5MHz ←


→ 6.5MHz ↔ 6.0MHz ←

Sound System Condition.


CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF

Note:

These are different sound broadcast transmission systems applicable to differing countries.

- 

Press to store the Sound System.




Press to exit from the "SOUND SYS".

This returns the set to the normal viewing condition.

Colour System Selection (Different region use differing systems)

If a clear picture with correct colours cannot be obtained when a Broadcast or AV signal is received, this function is used.

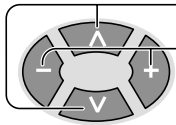- 

Press to select the "COLOUR SYS".

Press to produce the optimum image.

The colour system will change as shown.

→ AUTO ↔ PAL ↔ SECAM ←


→ NTSC3.58 ↔ NTSC4.43 ←

Colour System Condition.


CH SELECT	POSITION
SYS SELECT	ASIA / M.EAST
AUTO TUNE	
MANUAL TUNE	
SOUND SYS	5.5 MHz
COLOUR SYS	AUTO
FINE TUNE	
SKIP	OFF

Note:

PAL, SECAM and NTSC 3.58 are different colour signal broadcast transmission systems applicable to differing countries. NTSC 4.43 is a trick playback mode used in special VCR to playback NTSC recorded video tapes through PAL television equipment.

- 

Press to store the Colour System.




Press to exit from the "COLOUR SYS".

This returns the set to the normal viewing condition.

Owner ID

Owner ID allows you to enter a security code (Owner ID) and your personal details into the memory, so that in the unfortunate event of theft it will help the police to trace the owner.

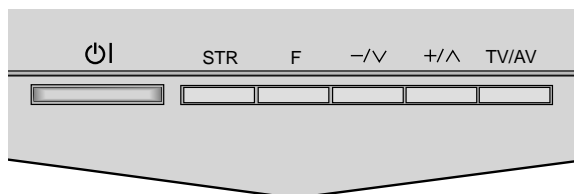


If you wish to check the personal details already entered into the TV, press the **F** (Front panel) and hold for 5 seconds. The details already entered are displayed on screen.

If **Owner ID** information was not entered when you switched on your TV for the first time or it is necessary to alter some of the information, **Owner ID** can be re-accessed via the **Tuning menu**.

1 **SET UP**
Press to display the Setup Menu.

2
Press to select the "Owner ID".
Press to access "Owner ID".

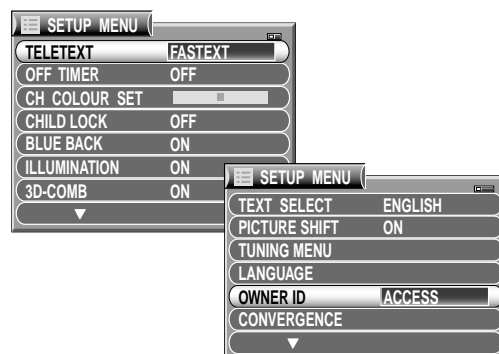

If the **Owner ID** has previously been set, enter the **PIN NUMBER** (using 0 to 9 on the remote control) followed by **STR** to proceed, this will take you to the **NAME** option.

If no **Owner ID** has previously been set, enter the required 4 digit **Owner ID PIN NUMBER** (using 0 to 9 on the remote control).

If a 4 digit **PIN NUMBER** was entered above, you will be taken automatically to the **NAME** line.

If not, move to the **NAME** line by using **-** or **+**.

 
Change character by using **^** or **v**.

Select character position by using **-** or **+**.


Repeat above until **NAME**, **HOUSE NUMBER** and **POSTCODE** are entered.


Press **STR** to store the details.
Press again when you are asked, "Are you sure?"


The Owner ID is now stored.




Setup Adjustment

1  Press to display the SETUP MENU.

2  Press to select the desired function.
Press to adjust or change the function.

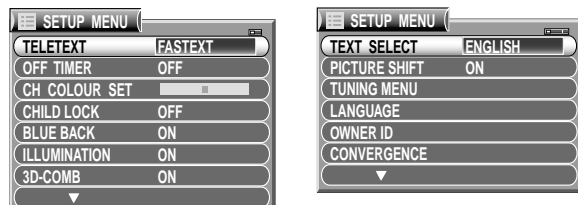

3  Press to go back to watching TV.

OFF TIMER

Switches the TV off within a preset time which you can choose from between 0 to 90 minutes in 15 minutes intervals.

> OFF < > 15 < > 30 < > 45 <
> 90 < > 75 < > 60 <

CH COLOUR SET

Colour density varying between broadcast channels can be adjusted to three levels for each reception channel.

CHILD LOCK

If the Child-Lock function is set ON, picture and sound of the TV/AV mode being viewed will disappear and a Black screen will appear.

BLUE BACK

You can choose Blue Back display ON or OFF when there is no signal.

ILLUMINATION

Select "ON" to illuminate the ILLUMINATION LIGHT on the front panel. Otherwise, select "OFF".

3D-COMB

You can choose 3D-COMB function ON or OFF. If the 3D-COMB function is ON, dot interference or cross colour will be reduced.

Note: Not available in component and RGB input.

PICTURE SHIFT

For use as a screen saver, this function changes the entire picture position (shift) approximately 2 mm every 15 minutes.

LANGUAGE

When you first install the TV, the On Screen Display language is set according to your choice of region. LANGUAGE lets you change the language used for On Screen Displays (refer to page 5).



[for TX-43/51P800H]

[for TX-43/51P800X]

English <—> Chinese

English <—> Arabic

During AV mode, the appearance of the SETUP MENU will differ from that of the TV mode, with the following function adjustments becoming available.

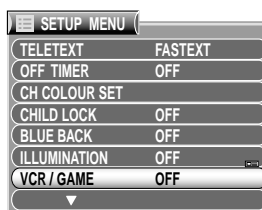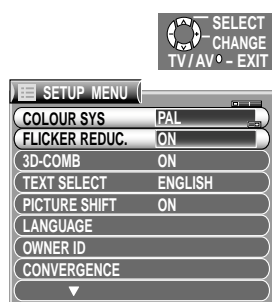

COLOUR SYSTEM

During AV mode, COLOUR SYSTEM is displayed.

If a clear picture with current colours cannot be obtained when a Broadcast or AV signal is received, then the colour system will change as shown.

> AUTO <—> PAL <—> SECAM <—>
> NTSC3.58 <—> NTSC4.43 <—>

PAL, SECAM and NTSC 3.58 are different colour signal broadcast transmission systems applicable to differing countries. NTSC 4.43 is a trick playback mode used in special VCR to playback NTSC recorded video tapes through PAL television equipment.

FLICKER REDUCTION


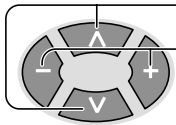

Lets you control any picture movement. Set to ON to activate motion compensation, to smooth the image and get rid of picture movement. Set to Off to have no flicker reduction at all, occasional broadcasts may benefit from using this setting.



ON <—> OFF

VCR/GAME

Reproduction of irregular signals, such as certain TV games and rental video tapes, may be improved.

Picture Adjustment

- 1** **PICTURE**
 Press to display the Picture Menu.
- 2**  Press to select the desired function.
 Press to adjust or change the function.
- 3** **TV/AV**
 Press to go back to watching TV.

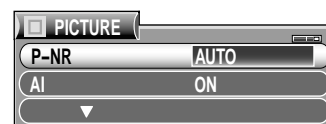
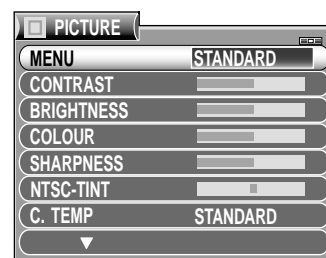


MENU

Picture menu mode will be memorized for each TV, AV1, AV2, AV3 and AV4 mode.

- You can change the level of each Item (CONTRAST, BRIGHTNESS, COLOUR, SHARPNESS, NTSC-TINT, C.TEMP, P-NR and AI) for each Picture Menu (DYNAMIC, STANDARD and CINEMA).



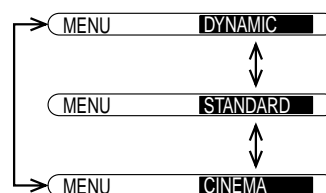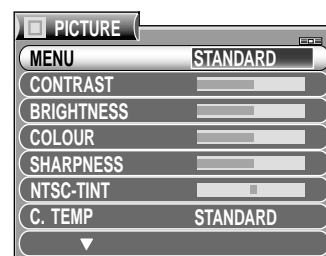







Picture Menu	Function
DYNAMIC	For viewing in brighter environments. This menu selects a higher than normal levels of Brightness and Contrast.
STANDARD	For viewing in normal (evening lighting) environments. This menu selects the normal levels of Brightness and Contrast.
CINEMA	Ideal for movies. Can be selected for VIDEO/COMPONENT.




CONTRAST, BRIGHTNESS, COLOUR, SHARPNESS, NTSC-TINT

Increase or decrease the levels of CONTRAST, BRIGHTNESS, COLOUR and SHARPNESS options according to your personal preference.

With an NTSC-TINT signal source connected to the TV, the picture hue can be adjusted to suit your taste.

Item	Effect	Function
CONTRAST	  Less More	Adjust for contrast.
BRIGHTNESS	  Darker Brighter	Adjusts for easier viewing of dark pictures such as night scenes and hair.
COLOUR	  Less More	Adjusts slightly to a lighter colour.
SHARPNESS	  Less More	Displays a sharp image.
NTSC-TINT	  Reddish Greenish	Adjust for proper skin colour.

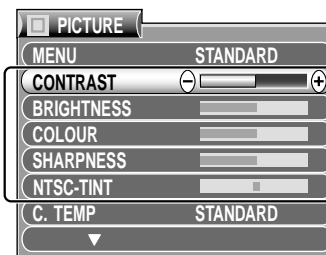


Notes:

- When set to Multi PIP mode, the main and sub pictures are both adjusted simultaneously.
- When the TV is receiving NTSC signals, NTSC-TINT is displayed and level adjustment would be possible.
- Only CONTRAST will be displayed during TEXT mode.


C. TEMP (Colour Temperature)

Set the overall colour tone of the picture.

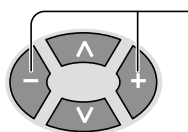


Press to switch between modes

STANDARD ↔ WARM ↔ COOL

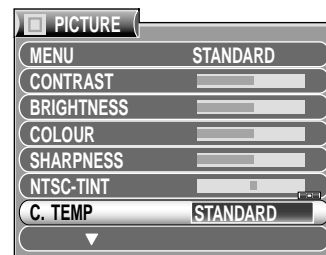

P-NR (Picture Noise Reduction)

Automatically reduces undesired picture noise.

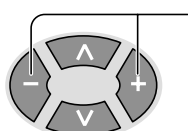

Press to switch between modes


OFF ↔ STRONG
AUTO ↔ WEAK



AI (Artificial intelligence)

Automatically analyses the incoming picture and processes it to give improved contrast and optimum depth of field.

ON ↔ OFF

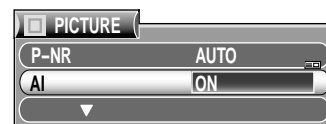



SCAN MODE

When receiving PAL or SECAM Signal, SCAN MODE is displayed.

Choose the screen refresh method:


Press to switch between modes

100 Hz MODE ↔ PROGRESSIVE

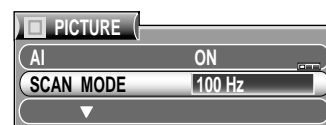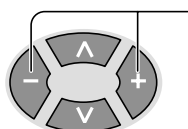

When receiving PAL or SECAM Signal

MODE	Function
100 Hz MODE	100Hz will give a steady picture for most signal transmission.
PROGRESSIVE	Avoids "snaking/jaggy" effect when viewing TV program with moving characters.

Switching is also possible using  on the remote control.

Note:

When viewing a PAL transmission (other than PAL 60) with **Scan mode** set to **Progressive**, the screen will flicker, this is not a fault.



Helpful Hint (N Normalization)

By pressing the Normal "N" Button on the Remote Control while the Picture menu is displayed, the selected menu will be changed to the Normal Mode.

Normalization will not occur if the menu is not displayed when the "N" Button is pressed.

The Normal mode is the factory preset condition. Returning to this original condition is called "Normalization".

Sound Adjustment


1

SOUND



Press to display the Sound Menu.

2

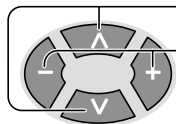

Press to select the desired function.


Press to adjust or change the function.

3

TV/AV



Press to go back to watching TV.

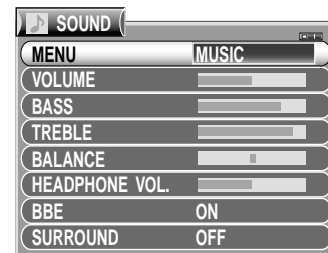

Note:



Some features are only available with the Surround feature switched off. Press to switch between On and Off.

MENU

Sound menu mode will be memorized for each TV, AV1, AV2, AV3 and AV4 mode.


- You can change the level of each Item (VOLUME, BASS, TREBLE, BALANCE and HEADPHONE VOL.) for each Sound Menu (MUSIC, CINEMA and NEWS).

Sound Menu	Function
MUSIC	Amplifies the Low frequencies and outputs optimum sound. For music programmes for example.
CINEMA	For movie and drama programmes.
NEWS	Human voices (middle pitch sounds) will sound more clear.

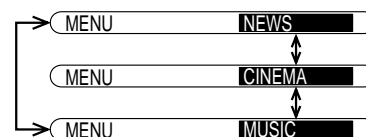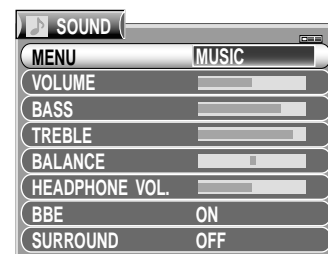

VOLUME, BASS, TREBLE, BALANCE, HEADPHONE VOL.

Item	Effect	Function
VOLUME	Less More	Adjusts output volume.
BASS	Less More	Adjusts low sounds.
TREBLE	Less More	Adjusts high sounds.
BALANCE	Left SP. Right SP.	Adjust left and right volumes.
HEADPHONE VOL.	Less More	Adjust Headphone volume.

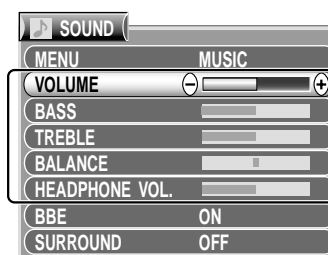


Notes:

- When set to Multi PIP mode, the main and sub sound are both adjusted simultaneously.
- When using one of the double window features, note that the headphones will relay the soundtrack for the programme in the main window, not the smaller window.


BBE (for TX-51P800H and TX-51P800X only)

Use special signal processing to accurately reproduce the "attack" of each sound, in order to make it immediate and superbly faithful to the original, while retaining its natural feel.


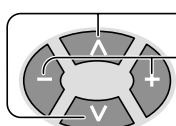


Press to select the BBE.

Press to select ON or OFF.

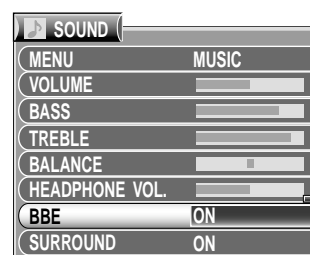

SURROUND MENU

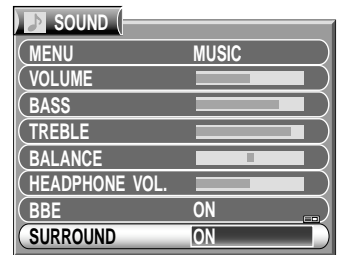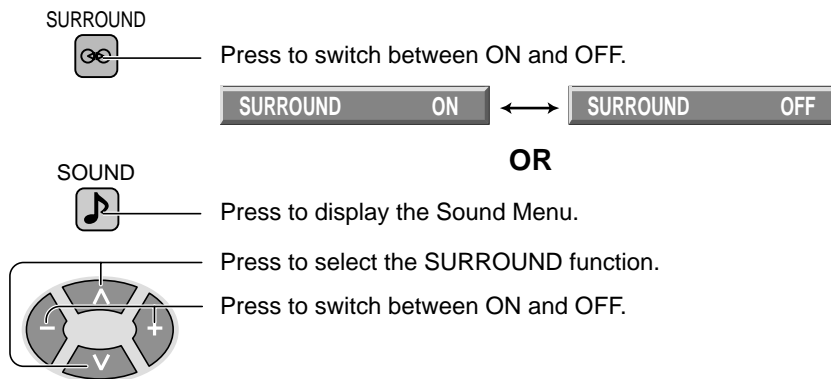

The benefits of surround sound are enormous. You can be completely enveloped in sound; just as if you were at a concert hall or cinema. The surround effect can be obtained without the use of external surround speakers.

Helpful Hint (N Normalization)


By pressing the Normal "N" Button on the Remote Control while the Sound menu is displayed, the selected menu will be changed to the Normal Mode.

Normalization will not occur if the menu is not displayed when the "N" Button is pressed.

The Normal mode is the factory preset condition. Returning to this original condition is called "Normalization".

Multi Screen

Multi PIP

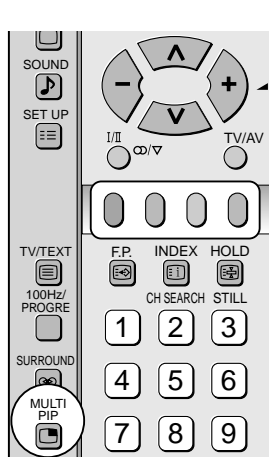


Press to select the current programme, the **picture in picture** feature, or the **picture and picture** feature.

The on screen selector keys for the features (corresponding to the four coloured buttons on the remote control) appear and disappear after a few seconds. If you would like to select an operation when the keys are not shown, press once more and the keys will reappear.



Picture in Picture (PIP)

Allows two pictures to be viewed at the time. Press the blue button to swap the contents of the two windows. Use the remote control to select a TV channel or an AV source to appear in the main window.

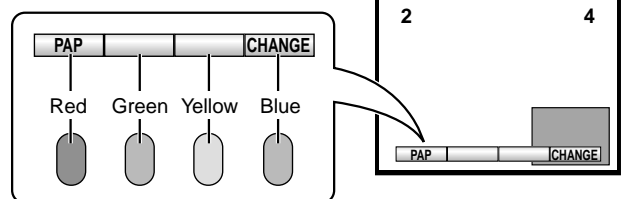

Press the Red button:

Press the Blue button:

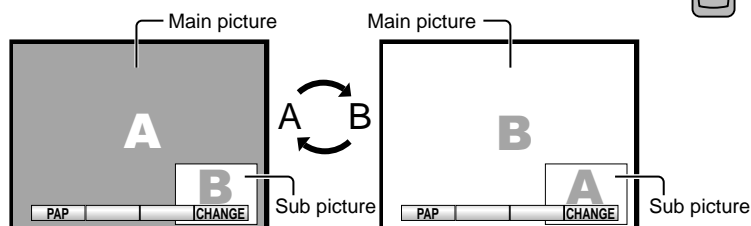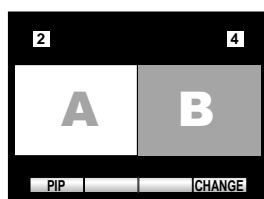

Press to exit from the PIP mode.

Picture and picture mode


Each time the main picture and the sub picture are swapped.

The screen mode is changed to Picture and Picture (PAP) mode.

Multi Screen

Picture and Picture (PAP)

Allows two pictures to be viewed at the same time.
Press the blue button to swap the contents of the two windows.
Use the remote control to select a TV channel or an AV source to appear in the main window.

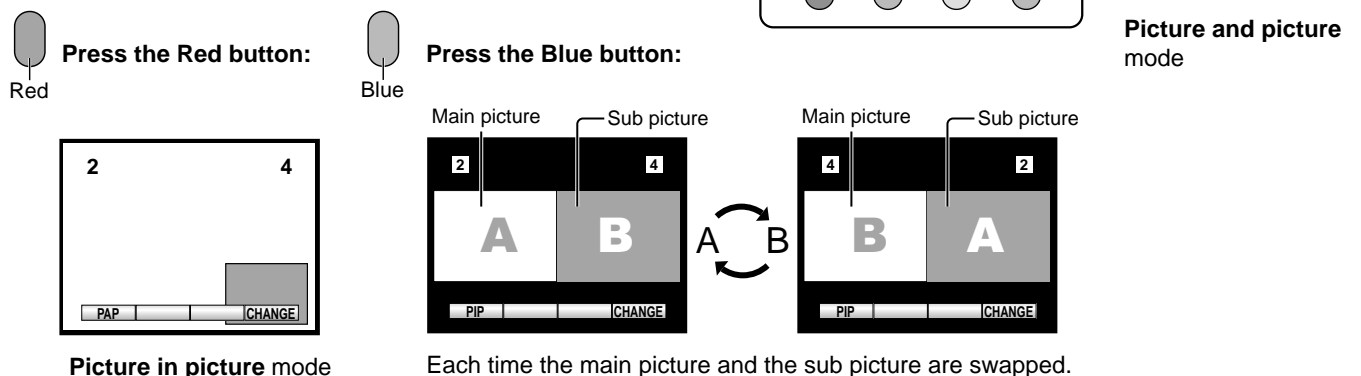

The screen mode is changed to Picture in Picture (PIP) mode.

MULTI PIP — Press to exit from the PIP mode.


Note:
MULTI PIP operations cannot be made during RGB mode, or progressive signal input (Y, Pb, Pr).

Picture and text

Picture and text lets you see the current programme and a page of teletext side by side.

TV/TEXT — Press to select watching the current programme, the teletext or the **picture and text** feature.

Note:
The remote control affects the teletext page; so select watching the current programme before making any changes to the programme.

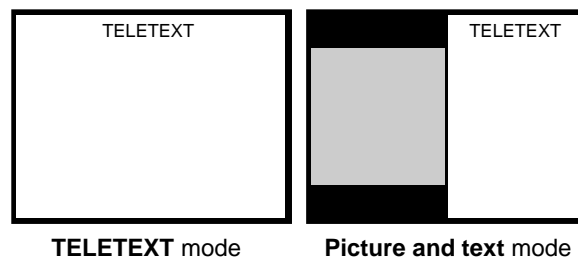

Still


HOLD STILL — Press to freeze the picture, press again to return to watching the current programme.

Channel Search

INDEX CH SEARCH — Press to show freeze-frames of the programmes being broadcast on all of the stored channels. These images are displayed in series, starting from the top left.

HOLD STILL — Press to pause the search.
Press again to cancel the pause.

INDEX CH SEARCH — Re-starts the search.
Press to exit from the feature.

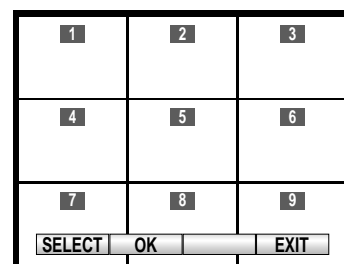



Red — Press to watch the current programme, exiting the feature.
Green — Press to watch the selected channel, exiting the feature.
Yellow — Press to select each channel's playing frame in turn.
Blue — Press to select each channel's playing frame in turn.

TELE TEXT

Teletext features may vary depending on the Broadcasting Companies and are only available when the channel selected is transmitting Teletext.

TEXT SELECT

 Select character set, so that all characters needed are available for text on teletext pages (eg: cyrillic characters, etc).

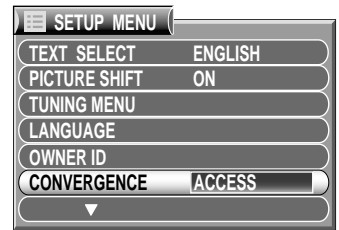

TV / Teletext mode

TV/TEXT



Press to select the current programme, the teletext and the picture or the teletext feature .


MULTI PIP




During Teletext mode, press to select the teletext feature or the teletext and the picture feature.



Current programme

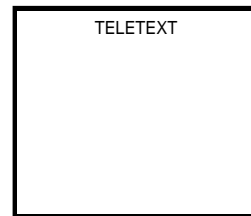

TELETEXT

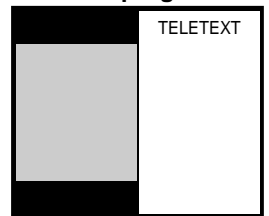

Picture and text

PICTURE




Press to display the contrast function with a cyan bar.

SOUND



Press to display the volume function with a green bar.

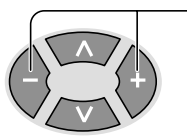

Press to alter the setting as required.

CONTRAST



 
VOLUME



SET UP



Press to display special function options at the bottom of the screen.



Press to select the desired function.

Note:

Characters will be illegible unless you select the Text Language which matches the text being received. Select the correct LANGUAGE (Refer to page 28).

LIST / FASTEXT mode

Choose 2 modes.


LIST ↔ FASTEXT

LIST mode:

Four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory.


FASTEXT mode:

Four differently coloured subjects are situated at the bottom of the display. To access more information , press the appropriately coloured button. This mode enables fast access to information on the subjects shown.

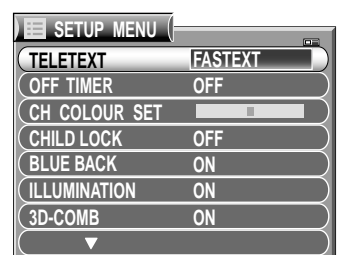


TELE TEXT

Page Selection (Two ways)

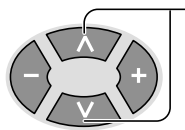

Press to increase or decrease the page number by one.

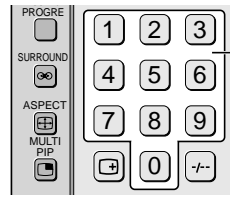

Enter the page number directly using 0-9 on the remote control.

Full / Top / Bottom

SET UP



Press to display special functions.



Press the **Green** button to expand the Top half.



Press again to expand the Bottom half.



Press again to return to normal (FULL) size.

Reveal

SET UP



+



Press to reveal hidden words e.g. quiz page answers. Press again to hide.

List Store

In LIST mode the four page numbers can be altered (programme positions 1 - 25 only). Press one of the four coloured buttons and enter the new page number.

STR



Press and hold, the page numbers will change to white indication and the page is stored.

Hold

HOLD



Press to hold the Teletext page when viewing multi-page information.


STILL

 is displayed on the top left of the screen.

 
Press again to return to automatic page update.

Favorite Page (F.P.)

Stores a favorite page in memory for instant recall. (programme positions 1 - 25 in List mode only).

Press the **Blue** button, select the page number, then press and hold .


 
 




The page number is now stored.



F.P.



 
Press to recall the stored page number.

	Teletext page	News Flash	Update
<div>SET UP</div> <div> + </div> <div>Yellow</div>	<div>Press to display special functions to view the TV picture whilst searching for a Teletext page .</div> <div></div> <div><div>P100</div></div> <div>When found a page.</div>	<div>Press to view the TV picture when a news flash page has been selected.</div> <div></div> <div><div></div></div> <div>TV picture viewing</div>	<div>Press to see the update of information on certain pages.</div> <div></div> <div><div>P100</div></div> <div>When an update is received.</div>
<div></div> <div>Yellow</div>	Press to view the page.	Press to display the News Flash.	Press to view the page.
<div>TV/AV</div> <div></div>	Return to normal TV operation.		

Index

INDEX



CH SEARCH

Press to return to the main index page.

Depending on the way information is transmitted, this may have to be pressed more than once to return to the main index page.

Sub Coded Page Access

When Teletext information exceeds more than one page, it may take some time for the automatic changing of the sub pages to reach the sub page you require.
It is possible to enter your required sub page and continue watching the normal programme until the correct sub page is found.

0

 —

9

Select the required page number using buttons 0 - 9.
If the top of the page indicates that sub pages are being transmitted yet the page does not change, then the number at the top of the page is there to indicate that the broadcaster has updated the page's contents, there are no sub pages.

SET UP

 + 

 
Blue

T****




T0006

Enter desired sub page number before the T**** disappears. To select page 6 enter 0, 0, 0 and 6.



Yellow

Viewing a normal TV programme.



Viewing the Teletext page.


0

 —

9

Select a new page number.

TV/AV



Press to return to normal TV operation.

Advanced Remote Control Operation

Stereo Bilingual Sound Selection



When you receive the stereo/bilingual sound system, sound output modes can be selected by pressing the stereo/bilingual sound selection button.

Audio Signal	STEREO	MAIN I	SUB II	MONO
Mode Indicator	∞	I	II	▽

NICAMused in New Zealand, Singapore and Hong Kong

Type of broadcast	Regular broadcast (Standard Audio)	Regular + NICAM MONO I (MAIN I)	NICAM STEREO	NICAM DUAL MONO (MAIN I / SUB II)
Mode Indicator	No Indicator ↔ ▽	I ↔ ▽	∞ ↔ ▽	I → II ↑ ▽ ↓

A2(German)used in Australia, Malaysia, Thailand, Indonesia etc.


Type of broadcast	Regular broadcast (Standard Audio)	BILINGUAL or DUAL MONO: MAIN I / SUB II	STEREO
Mode Indicator	No Indicator ↔ ▽	I ↔ II	∞ ↔ ▽

Notes:

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended you switch from STEREO to MONO.
- Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the "MONO" position, using the stereo/bilingual sound selection button.
- "DUAL", also known as "DUAL MONO" or as "BILINGUAL" is not currently transmitted in some countries.

VCR / DVD Control


The Remote Control is capable of operating some functions of selected Panasonic VCRs and DVD (Digital Versatile Disc) equipment. Some VCR and DVD equipment have different functions. So to ensure compatibility please refer to the equipment's instruction book or consult your dealer for details.

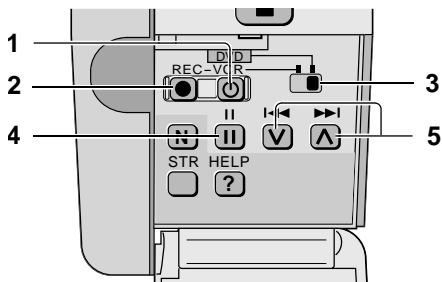

Button	Function	
	VCR	DVD
1		Power Switch
2		REC (Record)
3		VCR, DVD Select button
4		Pause/Still
5		Programme Skip

Manufacturer setting


Remote Control Operation is possible for the VCR's and DVD's of the various manufacturers.
After completion of setting, execute the various operations .

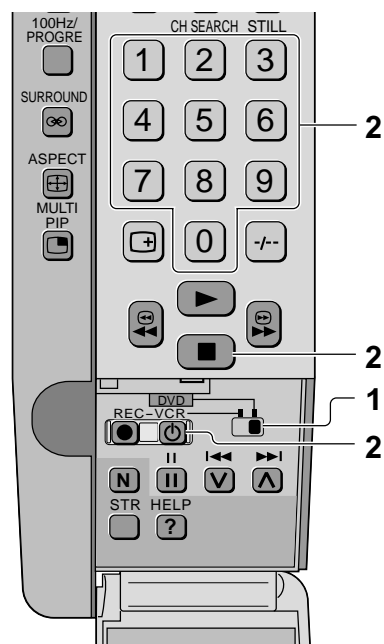

Press to select VCR / DVD.



While pressing the VCR / DVD Power button, press the manufacturer code (enter the two digit code), and press the VCR / DVD Stop button.

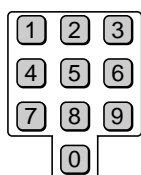

VCR

Manufacturer	Code	Manufacturer	Code
Panasonic/ National	10,11,12,13	NEC	40,41,42,43
AIWA	15,16	ORION	45,46
FUJITSU	20	PHILIPS	50
HITACHI	25,26,27	SANYO	55,56,57,58
JVC	30,31,32	SHARP	60,61
mitsubishi	35,36	SONY	65,66,67
		TOSHIBA	70,71

DVD

Manufacturer	Code
Panasonic	70, 71

Note:


 

 



 



 
 
 

 


After setting, execute operation confirmation.
If there is no operation, set a different code.

Helpful Hint


- (1) The respective VCR / DVD manufacturer code is cancelled when battery has been exchanged.
Please set it again.
- (2) Depending on the model, operation of VCR's or DVD's of the manufacturers listed above may not be possible.
- (3) In some cases, new products may not be operative.
- (4) It will not operate with other than the above manufactures.

Troubleshooting

Before you call for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Aerial Location, direction or Connections
 Multiple Image	 Normal Sound	Aerial Location, direction or Connections
 Interference	 Noisy Sound	Electrical Appliances Cars/Motorcycles Fluorescent Lamps
 Normal Picture	 No Sound	Volume (Refer to page 10, 11) (Check whether the mute function has been activated on the Remote Control.)
 No Picture	 No Sound	Not plugged into AC outlet Not switched on Contrast and Brightness/Volume setting (Check by pressing the Power Switch or Stand-by Button on the Remote Control.)
 No Colour	 Normal Sound	Colour Control (Refer to page 24, 25) Colour System (Refer to page 21)
 Scrambled	 Normal or Weak Sound	Retune Channels (Refer to page 15)
 Coloured Patches	 Normal Sound	Magnetic interference from unshielded equipment; TV set moved while "ON". Turn the TV set off for 30 minutes, using the "Power" Switch on the TV set.
 No Colour	 Noisy Sound	Sound System (Refer to page 21) Colour System (Refer to page 21)

 Projection TV screen

Symptoms	Checks
 <p>After-images appear</p>	<p>Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Projection TV screen. Examples of still pictures include logos, video games, computer images, teletext and images displayed in 16:9 mode.</p> <p>Note: The permanent after-image on the Projection TV screen resulting from fixed image use is not an operating defect and as such is not covered by the Warranty. This product is not designed to display fixed images for extended periods of time.</p>

Cleaning

To ensure continued excellent performance by this product, periodic cleaning is recommended.

	<p>The unit contains many plastic parts. For this reason DO NOT use benzine, thinner or other chemicals to clean the unit.</p>		<p>Dust will accumulate on the picture screen. Please wipe with a soft cloth from time to time. If you use a chemically treated cloth, please be careful to follow the instructions that come with the cloth.</p>
	<p>DO NOT bring into contact with insecticide or other volatile substances. DO NOT allow the unit to come into contact for extended periods with rubber or vinyl products.</p>		<p>Remove dirt and soiling by wiping with a light cloth. Even if the unit is heavily soiled, do not apply cleaner directly to the unit. Soak a cloth in a solution of neutral cleanser thinned with water. Then wring out the cloth, wipe the unit clean, and finish by wiping with a dry cloth. Do not use any type of cleansers on the picture screen.</p>

Specifications

	TX-43P800H / TX-51P800H		TX-43P800X / TX-51P800X		
Power Source	AC 220-240 V, 50/60 Hz		AC 110-240 V, 50/60 Hz		
Power Consumption	Stand-by condition 0.5 W Normal viewing 175 W		Stand-by condition 0.5 W Normal viewing 175 W		
	TX-43P800H/X		TX-51P800H/X		
Dimensions (W × H × D)	1095 mm × 1267.5 mm × 547 mm		1298 mm × 1394 mm × 547 mm		
Mass (Weight)	60 kg (Net)		66 kg (Net)		
Remote control Transmitter	EUR511254 R6 (AA) Battery × 2				
Receiving System					
21 Systems			21 Systems		
Function			Function		
1	PAL B, G, H	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders.	15	PAL 60 Hz/5.5 MHz	Playback from Special Disc Players and Special VCR's
2	PAL I		16	PAL 60 Hz/6.0 MHz	
3	PAL D, K		17	PAL 60 Hz/6.5 MHz	
4	SECAM B, G		18	SECAM 60 Hz/5.5 MHz	
5	SECAM D, K		19	SECAM 60 Hz/6.0 MHz	
6	SECAM K1		20	SECAM 60 Hz/6.5 MHz	
7	NTSC M (NTSC 3.58/4.5 MHz)		21	NTSC 50 Hz/4.5 MHz	
8	NTSC 4.43/5.5 MHz	Playback from Special VCR's			
9	NTSC 4.43/6.0 MHz				
10	NTSC 4.43/6.5 MHz				
11	NTSC 3.58/5.5 MHz				
12	NTSC 3.58/6.0 MHz				
13	NTSC 3.58/6.5 MHz				
14	SECAM I				
Receiving Channels					
Regular TV					
VHF BAND					
UHF BAND					
CATV					
2-12 (PAL/SECAM B, K1)					
21-69 (PAL G, H, I/SECAM G, K, K1)					
S1-S20 (OSCAR)					
0-12 (PAL B AUST.)					
28-69 (PAL B AUST.)					
1-125 (U.S.A CATV)					
1-9 (PAL B N.Z)					
13-57 (PAL D, K)					
C13-C49 (JAPAN)					
1-12 (PAL/SECAM D)					
13-62 (NTSC M Japan)					
S21-S41 (HYPER)					
1-12 (NTSC M Japan)					
14-69 (NTSC M U.S.A)					
Z1-Z37 (CHINA)					
2-13 (NTSC M U.S.A)					
5A, 9A (AUST.)					
Receiving Stereo System					
NICAM I, NICAM B/G, NICAM D, A2 (German)					
Tuning System					
Frequency synthesizer					
Auto Search Tuning					
POSITION : 100 Position					
DIRECT : 125 Position					
Audio Output					
40 W [20 W + 20 W] (10 % THD)					
Speaker System					
Woofer (13 cm) × 2 + Squawker (12 cm × 6 cm) × 2 TX-43P800H/X					
Woofer (13 cm) × 2 + Squawker (12 cm × 6 cm) × 2 + Tweeter (5 cm) × 2TX-51P800H/X					
Headphones					
3.5 mm Plug × 1					
Aerial Impedance					
75 Ω Unbalanced coaxial					
Video/Audio/Component Terminals					
AV 1, 2, 3, 4					
S Video In					
Y:1 Vp-p, 75 Ω					
C:0.3 Vp-p, 75 Ω					
DVD (Y/P _B /P _R)					
Video In					
1 Vp-p, 75 Ω					
Audio In					
Approx. 0.5 V 47 KΩ					
Monitor Out					
Video Out					
1 Vp-p, 75 Ω					
Audio Out					
Approx. 0.5 V 1 KΩ					
AV1 IN (Rear) : S Video, Video, Audio L/R terminals					
AV2 IN (Rear) : Video or Y/P _B /P _R , Audio L/R terminals					
AV3 IN (Front) : S Video, Video, Audio L/R terminals					
AV4 IN (Rear) : Video or Y/P _B /P _R , Audio L/R terminals					
Applicable signal to AV2, AV4 Y/P _B /P _R input terminals:					
480i(525i), 576i(625i), 480P(525P) and 576P(625P)					

Note: Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.



Manufactured under license from BBE Sound, Inc.

Licensed by BBE Sound, Inc. under USP4638258 and 4482866.

BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

Customer's Record

The model number and serial number of this product can be found on its cabinet. You should note this serial number in the space provided below and retain this book plus your purchase receipt as a permanent record of your purchase to aid in identification in the event of theft or loss and for Warranty Service purposes.

Model Number _____

Serial Number _____